

Operating instructions

Washing machine



To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Caring for the environment	6
Warning and Safety instructions	7
Operating the washing machine	14
Control panel.....	14
Touch display and sensor controls.....	14
Main menu.....	15
Examples on how to operate the appliance	16
Before using for the first time	18
Removing the protective foil and stickers	18
Miele@home	19
1. Setting the language	20
2. Setting up Miele@home	20
3. Setting the clock format	21
4. Removing the transit bars	21
5. Commissioning TwinDos	22
6. Starting the calibration programme.....	25
Washing environmentally and economically	26
Energy and water consumption	26
Detergent consumption.....	26
When drying with a tumble dryer	26
EcoFeedback.....	27
1. Preparing the laundry.....	28
2. Selecting a programme	29
3. Selecting programme settings.....	30
4. Loading the washing machine	32
5. Adding detergent.....	33
TwinDos	33
Detergent dispenser drawer	35
CapDosing.....	37
6. Starting the programme - the end of the programme	39
Spinning.....	40
Final spin speed in the programme	40
Rinse and interim spin	41

Contents

Programme chart	42
Garment care label symbols.....	49
Extras.....	50
Quick	50
Eco	50
Water plus	50
Extra rinse.....	50
SingleWash.....	50
Pre-wash	50
Soak	51
Intensive	51
AllergoWash	51
Extra gentle	51
Extra quiet	51
Rinse hold.....	51
Wash programme chart - Extras.....	52
Programme sequence.....	54
PowerWash 2.0	56
Changing the programme sequence	57
Cancelling a programme	57
Interrupting a programme.....	57
Changing a programme.....	57
Adding or removing laundry	57
Favourite programmes.....	58
Washing assistant	59
Timer.....	60
SmartStart	61
Detergent	62
The correct detergent.....	62
Detergent dispensing aids.....	62
Fabric softeners and liquid starch	62
Miele recommended detergents	64

Contents

Cleaning and care	66
External casing and fascia panel.....	66
Cleaning the detergent dispenser drawer	66
Cleaning the drum (Hygiene info)	68
TwinDos maintenance	68
Cleaning the water inlet filter	69
 Problem solving guide	70
The programme does not start.....	70
Fault messages after a programme has been cancelled.....	71
Fault messages at the end of a programme.....	72
Messages or faults with the TwinDos system	74
Problems with TwinDos	75
General problems with the washing machine	76
An unsatisfactory wash result	78
The door will not open.....	79
Opening the door in the event of a blocked drain outlet and/or power cut	80
 Service.....	82
Contact in case of fault	82
Optional accessories	82
Warranty	82
 Installation and connection	83
Front view	83
Rear view.....	84
Installation surface	85
Transporting the washing machine to its installation site.....	85
Removing the transit bars	85
Refitting the transit bars	87
Levelling the machine.....	88
Screwing out and adjusting the feet.....	88
Installing under a continuous worktop	89
Washer and dryer stack	89
The Miele water protection system	90
Connection to the water supply	91
Drainage	94
Electrical connection	95
 Technical data.....	96
 Consumption data.....	97
Consumption data for the nominated energy labelling programme according to AS/NZS 2040.1 & AS/NZS 2040.2	97

Contents

Settings	99
Selecting settings	99
Changing a setting	99
Closing the Settings menu	99
Controls / Display 	100
Language 	100
Consumption	100
Code.....	100
Memory	101
Clock display	101
Volume.....	101
Display brightness	101
Temperature unit.....	101
"Display" off status.....	101
Programme sequence	102
TwinDos	102
Soiling.....	102
Water plus level	102
Maximum rinse level.....	103
Soak duration	103
Longer pre-wash Cottons.....	103
Gentle action	103
Anti-crease	103
Network	104
Miele@home	104
SmartGrid	105
Remote control.....	105
RemoteUpdate	106
Appliance parameters	107
Water intake	107
Legal information.....	107
Installation requirements	108
Low water pressure	108
Suds cooling.....	108
Temperature reduction	108
Optional accessories	109
Detergent.....	109
Specialist detergents	110
Fabric care.....	110
Additives.....	111
Machine care products.....	111

Caring for the environment

Disposal of the packing material

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances. You are also responsible for deleting any personal data that may be stored on the appliance prior to disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Warning and Safety instructions

This washing machine complies with current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the machine, please read these instructions carefully before using it for the first time. They contain important information on its safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future user.

Correct application

- ▶ This washing machine is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.
- ▶ The washing machine is not suitable for outdoor use.
- ▶ It must only be used to wash garments which have been declared suitable for washing by the manufacturer indicated on the garment care label. Any other use is not permitted. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.
- ▶ This washing machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety.

Warning and Safety instructions

Safety with children

- ▶ Young children must not be allowed to use this appliance.
- ▶ Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.
- ▶ Cleaning work may only be carried out by older children under the supervision of an adult.
- ▶ Please supervise children in the vicinity of the washing machine and do not let them play with it.

Technical safety

- ▶ Please observe the instructions in “Installation and connection” and “Technical data”.
- ▶ Before setting up the washing machine, check it for any externally visible damage. Do not install or use a damaged machine.
- ▶ Before connecting the washing machine, ensure that the connection data on the data plate (fuse rating, voltage and frequency) matches the mains electricity supply. If in any doubt, consult a qualified electrician.
- ▶ Reliable and safe operation of this washing machine can only be assured if it has been connected to the mains electricity supply.

Warning and Safety instructions

- ▶ The electrical safety of this washing machine can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested and, where there is any doubt, the household wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- ▶ Do not connect the washing machine to the mains electricity supply by a multi-socket adapter, extension lead or similar. These do not guarantee the required safety of the machine (fire hazard due to the risk of overheating).
- ▶ Faulty components must only be replaced by genuine Miele spare parts. Miele can only guarantee the safety of the appliance when Miele replacement parts are used.
- ▶ The electrical socket must be easily accessible after installation so that the machine can be disconnected from the electricity supply if necessary.
- ▶ Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele authorised service technician, otherwise any subsequent damage will not be covered by the warranty.
- ▶ If the connection cable is faulty, it must only be replaced by a Miele approved service technician to protect the user from danger.

Warning and Safety instructions

- ▶ In the event of a fault or for cleaning purposes, the washing machine is only completely isolated from the electricity supply when:
 - it is switched off at the wall socket and the plug is withdrawn, or
 - it is switched off at the mains circuit breaker.
- ▶ The Miele Waterproof system protects from water damage provided the following conditions have been met:
 - The machine is correctly plumbed in and connected to the electricity supply.
 - If a fault or damage has been identified, the machine must be examined by a competent person before further use, and repaired if necessary.
- ▶ The water flow pressure must be at least 100 kPa and should not exceed 1000 kPa.
- ▶ This washing machine must not be installed and operated in mobile installations (e.g. on a ship).
- ▶ Do not make any alterations to the machine, unless authorised to do so by Miele.
- ▶ This washing machine is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose for which it is intended. It is not suitable for room lighting. Replacement lamps may only be replaced by a Miele authorised technician.

Warning and Safety instructions

Correct use

- ▶ Do not install the washing machine in a room where there is a risk of frost. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- ▶ Before using the machine for the first time, check that the transit bars at the rear of the machine have been removed (see “Installation and connection - Removing the transit bars”). During spinning, a transit bar which is still in place may result in damage to both the machine and adjacent furniture or appliances.
- ▶ Turn off the tap if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- ▶ Flooding danger.
If hooking the drain hose into a wash basin, check that the water can drain off quickly enough to prevent the sink from overflowing. Make sure the drain hose is secure, so that the force of the water flowing out of the hose does not dislodge it.
- ▶ Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine (e.g. suds container, drum), which in turn can result in damage to the laundry.

Warning and Safety instructions

- ▶ Take care when opening the drum door after using the steam function. There is a danger of burning due to escaping steam and the high temperature of the surface of the drum as well as the porthole glass. Stand back away from the machine and wait until the steam has dissipated.
- ▶ The maximum load for this washing machine is 9 kg (dry weight). See the “Programme chart” for the maximum recommended loads for individual programmes.
- ▶ If the correct amount of detergent is dispensed, the machine should not need to be descaled. If, however, you do wish to descale it, only use a proprietary natural citric acid based descaling agent. Miele recommends using Miele descaler for washing machines which is available to order online at shop.miele.com (depending on country) or from Miele. Strictly observe the instructions on the packaging.
- ▶ Textiles which have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being washed in the machine.
- ▶ Do not use solvent based cleaning agents, e.g. those containing benzine, in this machine, as this may result in damage to component parts and create toxic fumes. Such agents also pose a fire and explosion hazard.
- ▶ Do not use solvent based cleaning agents, e.g. those containing benzine, to clean the external surfaces of the machine. They can cause damage to plastic surfaces.
- ▶ Only use dyes specified by the manufacturer as being suitable for use in a domestic washing machine. Always observe the manufacturer's instructions carefully.

Warning and Safety instructions

- ▶ Colour run and dye removers contain sulphur compounds which can cause damage such as corrosion. Do not use these products in this machine.
- ▶ If detergent comes into contact with the eyes, rinse them thoroughly with lukewarm water immediately. If swallowed, seek medical assistance immediately and retain the packaging or label for reference. Those with skin problems or sensitive skin should avoid their skin coming into contact with detergent.


Accessories

- ▶ Only use genuine Miele spare parts and accessories with this appliance. If spare parts or accessories from other manufacturers are used, this will invalidate the warranty, and Miele cannot accept liability.
- ▶ A Miele tumble dryer can be stacked on top of a Miele washing machine using the appropriate stacking kit (available as an optional accessory). Please make sure you order the correct one for the Miele washing machine and Miele tumble dryer.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Operating the washing machine

Control panel

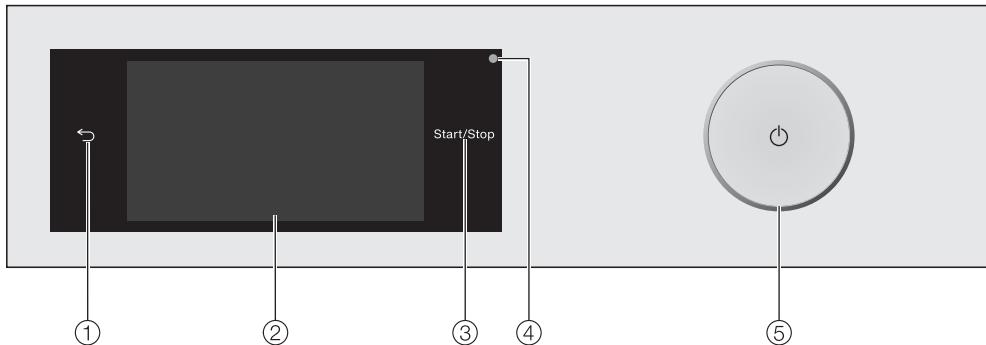

① ↵ sensor

Takes you back a level in a menu.

② Touch display

③ Start/Stop sensor

Touching the *Start/Stop* sensor starts the selected programme or cancels a programme that has already been started. The sensor flashes slowly as soon as it is possible for a programme to be started and then lights up constantly after the programme has started.

④ Optical interface

For service technicians.

⑤ ⏪ button

For switching the washing machine on and off. To save energy, the washing machine will switch off automatically. This occurs 15 minutes after the end of the programme/Anti-crease phase, or after being switched on if no further selection is made.

Touch display and sensor controls

The ↵ and *Start/Stop* sensors and the sensors in the display react to fingertip contact.

The touch display can be scratched by pointed or sharp objects, e.g. pens.
Only touch the display with your fingers.


Operating the washing machine

Main menu

After switching on the washing machine, the main menu will appear in the display.


You access all the important sub-menus from the main menu.

Touch the  sensor at any time to return to the main menu. Values set previously are not saved.

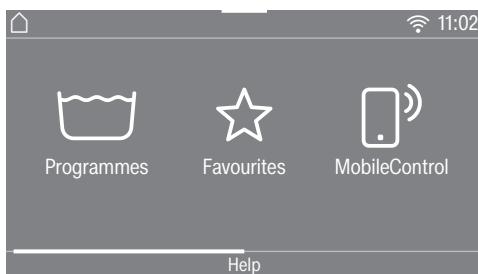

Main menu page 1

You can scroll to the second page of the main menu by swiping your finger across the display.

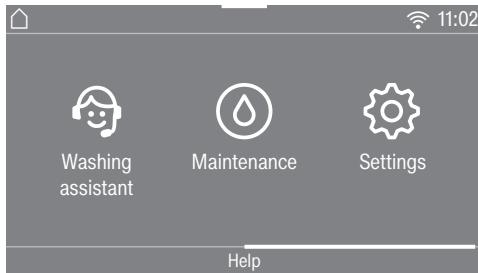

Main menu page 2

Programmes

For selecting the wash programme.

Favourites

You can save up to 12 of your own customised wash programmes (see "Favourite programmes").

MobileControl

With MobileControl you can operate your washing machine remotely with the Miele@mobile App.

The Remote control setting must be switched on.

Touch the MobileControl sensor control and follow the instructions in the display.

Washing assistant

The Washing assistant guides you step by step so that you can select the optimum wash programme for your laundry (see "Washing assistant").

Maintenance

Maintenance options for the TwinDos system and the Clean machine programme are located in the Maintenance menu (see "Cleaning and care").

Settings


You can alter the washing machine's electronics to suit changing requirements in the Settings menu (see "Settings").

Operating the washing machine

Examples on how to operate the appliance

Option lists

Programme menu (single option list)

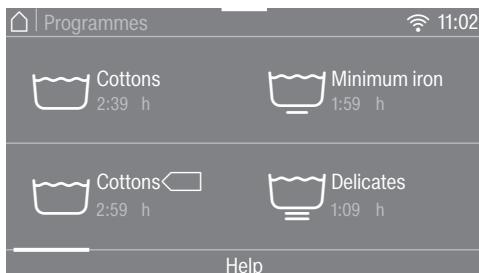


You can scroll to the right or the left by swiping your finger across the screen. To do this, place your finger on the touch display and swipe it in the direction you want.

The orange bar under the pictures shows that there are further options to choose from.

Touch a programme name to select the wash programme.

The display will change to the standard display for that programme.

Extras menu (multiple selection)

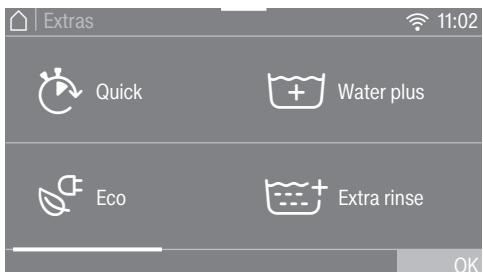

You can scroll to the right or the left by swiping your finger across the screen. To do this, place your finger on the touch display and swipe it in the direction you want.

The orange bar under the pictures shows that there are further options to choose from.

Touch one or several *Extras* to select it/them.

Currently selected *Extras* are marked orange.


To deselect an *Extra*, simply touch the *Extra* again.

Use the *OK* sensor to activate all selected *Extras*.

Operating the washing machine

Setting numerical values

You can set numerical values in some menus.

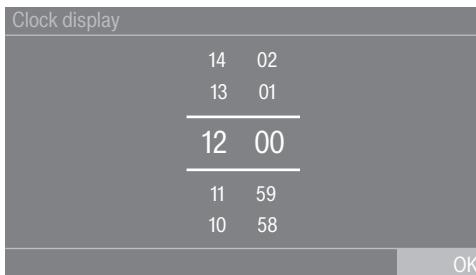

Enter the numbers by swiping upwards or downwards. Place your finger on the number that you want to change and move your finger in the direction you want. Use the *OK* sensor to accept all set numerical values.

Useful tip: Briefly touching a number will bring up the numerical keypad. Once a valid number has been entered, the *OK* sensor will be highlighted green.

Pull-down menu

The pull-down menu can be used to display information, e.g. about a wash programme.



Touch the top edge of the screen in the middle and drag down with your finger.

Help display

With some menus Help appears along the bottom line of the display.

- Touch the Help sensor to display the text.
- Touch the Close sensor to return to the previous screen.

Exiting a menu

- Touch the ↲ sensor to return to the previous screen.

Entries made before this which have not been confirmed with *OK* will not be saved.

Before using for the first time

⚠ Damage resulting from incorrect installation and connection.

Installing and connecting the washing machine incorrectly will cause serious damage to property. See "Installation and connection".

This washing machine has undergone a complete functional test at the factory and there will be some residual water in the drum from this process.


Removing the protective foil and stickers

- Remove:
 - the protective foil from the door
 - any stickers from the front and the lid


Please do not remove any labels (e.g. the data plate) which are visible when you open the door.

Remove the detergent cartridges and the drain hose elbow from the drum

Two detergent cartridges for automatic detergent dispensing and an elbow piece for the drain hose are stored in the drum.

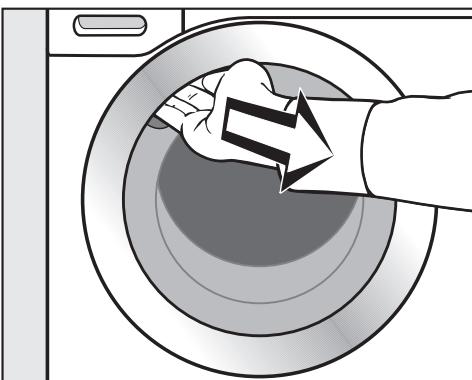

- Reach under the door grip and pull the door open.
- Take the two cartridges and the elbow piece out of the drum.

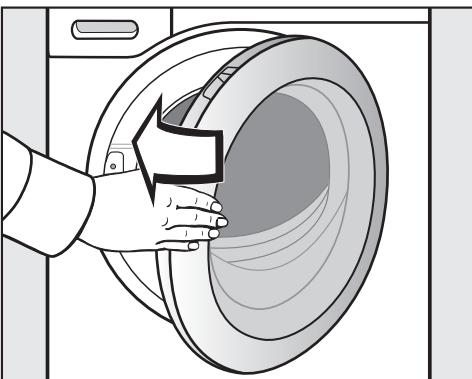

- Shut the door with a gentle swing.

Before using for the first time

Miele@home

Your washing machine is equipped with an integrated Wi-Fi module.

In order to use it you need:

- a Wi-Fi network
- the Miele@mobile App
- a Miele user account. The user account can be created via the Miele@mobile App.

The Miele@mobile App will guide you as you connect your washing machine to your home Wi-Fi network.

Once your washing machine is connected to your Wi-Fi network, you can use the App, for example, to carry out the following activities:

- Operate your washing machine remotely
- Access information about the operating status of your washing machine
- Access information about a programme sequence on your washing machine

Connecting your washing machine to your Wi-Fi network will increase energy consumption, even when the washing machine is switched off.

Before installing the washing machine in its final location, ensure the signal strength is sufficient for your Wi-Fi network.

Miele@mobile App

You can download the Miele@mobile App from the Apple App Store® or the Google Play Store™ free of charge (only functional in selected countries).



Before using for the first time

Switching on the washing machine


- Press the  button.

The welcome screen will light up.

The display will guide you through the **6 steps** of the initial commissioning process.

1. Setting the language

You will be asked to select the language you require for the display. It is possible to change the language at any time via the Settings menu.

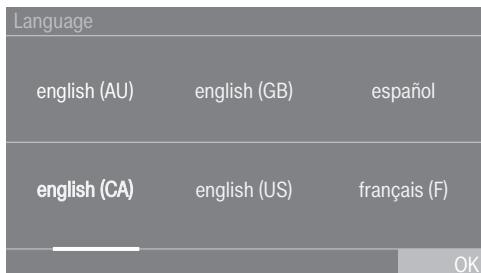

- Scroll to the left or the right until the language you want appears.
- Touch the sensor for the language you want.

The selected language will be highlighted in orange and the display will change to the menu for setting up Miele@home.

2. Setting up Miele@home



Set up "Miele@home"?

Skip

Continue

- To set up Miele@home now: touch the Continue sensor.

Useful tip: To postpone set-up until later: touch the Skip sensor. The following message will then appear in the display:

 It is possible to set up later in "Settings" / "Miele@home".

Confirm with OK.



Which connection method do you want to use?

via WPS

via App

- Select the connection method you wish to use.

You will then be guided by the display and the Miele@mobile App.

Before using for the first time

3. Setting the clock format

The time of day display can be in 12 h or 24 h clock format.


- Select the clock format you want and confirm this with the *OK* sensor.

The display will then bring up the screen for setting the time of day.

Setting the time of day

This message only appears if the washing machine has not yet been connected to a Wi-Fi network.

The time of day is set automatically if connection is established with a Wi-Fi network.

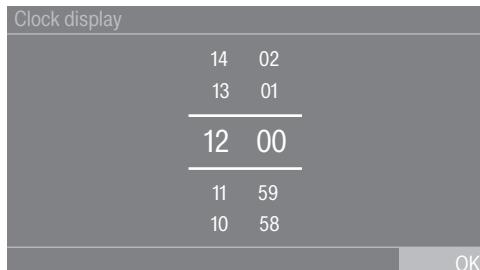

- Place your finger on the number that you want to change and move your finger in the direction you want.
- Confirm with the *OK* sensor.

4. Removing the transit bars

 Damage resulting from failure to remove the transit bars.

Failure to remove the transit bars can result in damage to the washing machine and to adjacent cabinetry or appliances.

Remove the transit bars as described in "Installation and connection".

- Confirm that the transit bars have been removed with the *OK* sensor.

The following message appears in the display:

 Remove transit bars and observe "Warning and Safety instructions" and "Before using for the first time" in the operating instructions.

- Confirm the message with the *OK* sensor.

The display will then change to the screen for setting up TwinDos.

Before using for the first time

5. Commissioning TwinDos



Set up "TwinDos"?

Skip

Continue

- Touch the Continue sensor to set up TwinDos straight away.

Useful tip: To postpone set-up until later: touch the Skip sensor. The following message will then appear in the display:

i It is possible to set up later in "Settings" / "TwinDos".

Confirm with **OK**.

Settings for compartment ①

The procedure below describes the procedure for Miele UltraPhase 1 and Miele UltraPhase 2. The procedure for other detergents is similar.

Agent for comp. ① 11:02

No agent	Universal detergent	Delicates detergent
Miele UltraPhase 1	Colour detergent	Delicates/Woollens


OK

- Touch the Miele UltraPhase 1 sensor.

The following message will then appear in the display:

i Please enter the dosing recommendation of your detergent for a wash with normal soiling. Take note of your water hardness level.

The dispensing quantity for UltraPhase 1 for (hardness range **I**) is preset.

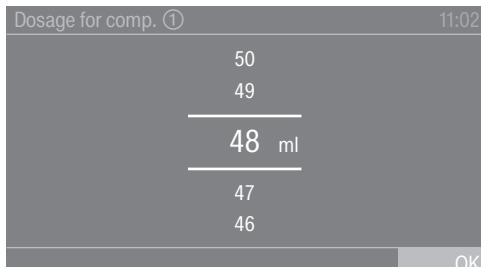


- Confirm the preset value with the **OK** sensor, or change the value.

UltraPhase 1		
	Hardness level I	48 ml
	Hardness level II	60 ml
	Hardness level III	72 ml


The following appears in the display:

i Insert container ①


Before using for the first time

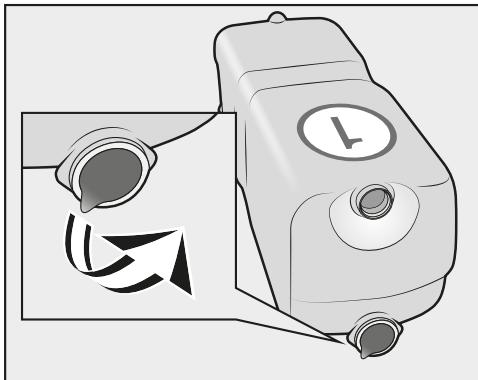

- Remove the foil from the detergent cartridge.

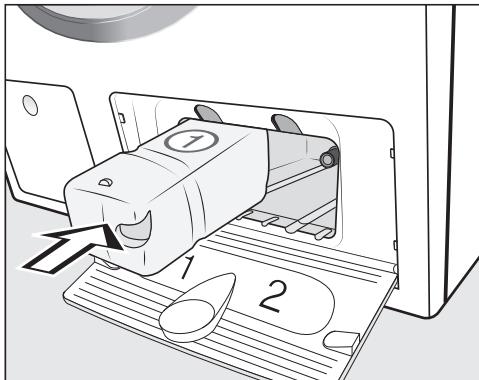

- Push the **UltraPhase 1** detergent cartridge into **compartment 1** until it locks into position.

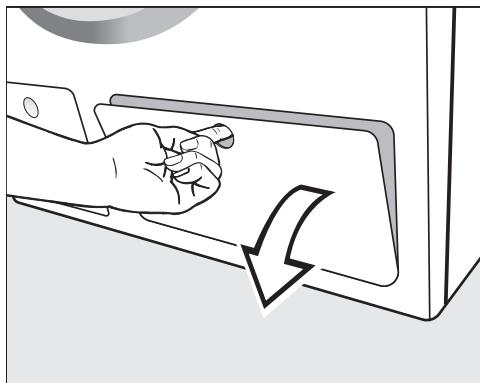

- Open the access panel for TwinDos.


The following message will appear in the display:

i Now enter the settings for UltraPhase 2.

Before using for the first time

Settings for compartment ②

The dispensing quantity for UltraPhase 2 for  (hardness range I) is preset.

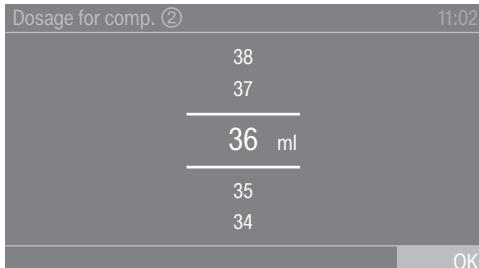


- Confirm the preset value with the **OK** sensor, or change the value.


UltraPhase 2		
	Hardness level I	36 ml
	Hardness level II	45 ml
	Hardness level III	54 ml

The following appears in the display:

- Insert container ②

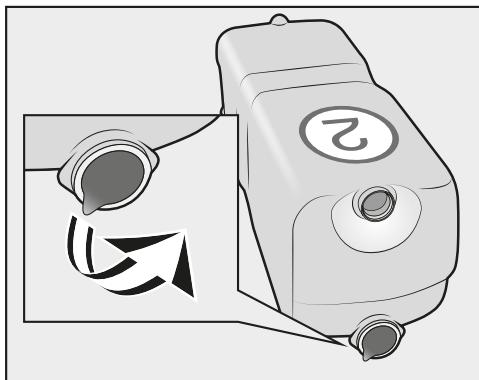

- Remove the foil from the detergent cartridge.

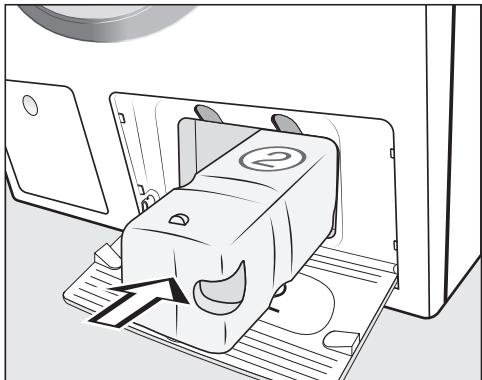

- Push the **UltraPhase 2** detergent cartridge into **compartment 2** until it locks into position.

When the cartridge is pushed in, the display message switches to:

 "TwinDos" is set up. Changes can be made in "Settings" / "TwinDos".

- Confirm with the **OK** sensor.
- Close the TwinDos access panel.

The display changes to the calibration programme.

Before using for the first time

6. Starting the calibration programme

For optimum water and energy consumption and excellent wash results, it is important to calibrate the washing machine.

To do this, the *Cottons* programme **must** be run without laundry and without detergent.


No other programmes can be started until calibration has been carried out.

The following message appears in the display:

■ Turn on the tap and run the Cottons 90°C programme without any laundry

■ Confirm with the *OK* sensor.

The display will then change to the standard display for the *Cottons* programme.

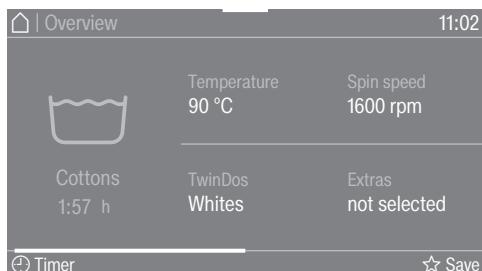


■ Touch the *Start/Stop* sensor.

The calibration programme is started. It will take approximately 2 hours.

At the end of the programme the following message will appear in the display:

■ Set-up completed

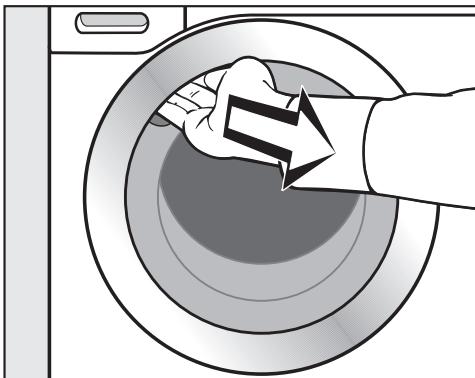

■ Reach under the door grip and pull the door open.

Useful tip: For safety reasons, close the door when the washing machine is not in use. Otherwise there is a danger of objects being placed inadvertently in the drum. If these remain unnoticed and were washed in the next load, they could damage the laundry. An open door is also a danger to pets and children.

■ Switch the washing machine off with the *Off* control.

Washing environmentally and economically

Energy and water consumption

- To get the most out of your machine, load the maximum dry load for the programme you are using.
The energy and water consumption will be the lowest in relation to the size of the load.
- When smaller amounts of laundry are washed, the Auto load control system will reduce the amount of water and energy used.
- Use the *Express 20* programme for small, lightly soiled loads.
- Modern detergents make it possible to wash at lower temperatures (e.g. 20°C). Using lower temperature settings will save energy.
- Washing at low temperatures and/or using liquid detergents can cause bacteria and odours to build up in the washing machine. Miele therefore recommends cleaning the washing machine once every month.

The washing machine reminds you to do so with the following message in the display: Hygiene info: Select "Maintenance" and start the "Clean machine" programme..

- Use the hot water connection to save energy.

Detergent consumption

- For precise dispensing, use automatic detergent dispensing.
- Adjust the dosage to the degree of soiling of the laundry.
- Do not exceed the amounts of detergent recommended by the manufacturer on the packaging.

When drying with a tumble dryer

Selecting the highest possible spin speed for the wash programme will save energy when drying in a tumble dryer afterwards.


Washing environmentally and economically

EcoFeedback

You can view information about the energy and water consumption of your washing machine with the pull-down menu.

The following information will appear in the display:

- An estimate of the energy and water consumption before the programme begins.
- The actual energy and water consumption during the programme or at the end of the programme.

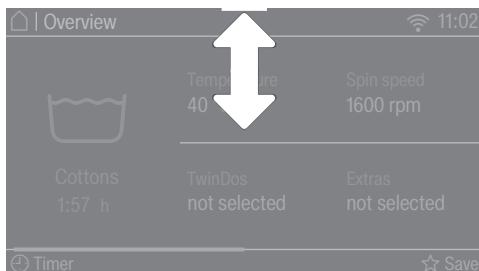

- Open the pull-down menu.

1. Estimate

The estimated energy and water consumption levels will be displayed as a bar chart on the right-hand side.

The more bars visible, the higher the energy or water consumption.

The estimate will vary depending on the wash programme, temperature and any Extras selected.

2. Actual consumption

You can view the actual amount of energy and water used by a programme both during and at the end of the programme.


The costs can also be displayed. See “Settings - Consumption” for more detailed information on costs.

The consumption will alter as the programme progresses.

If the door is opened or the appliance has switched off automatically at the end of the programme, the data will revert to the estimated consumption.

Useful tip: You can view the consumption data for the last wash programme and for total consumption (see “Settings - Consumption”).

1. Preparing the laundry

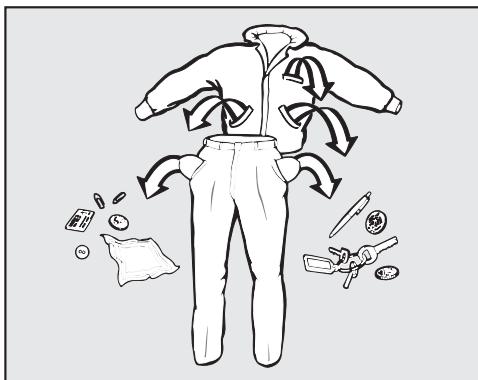

■ Empty all pockets.

⚠ Damage due to foreign objects.
Nails, coins, paper clips, and so on can cause damage to garments and components in the machine.
Check the laundry before washing and remove any foreign objects.

Sorting the laundry

■ Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.

Useful tip: Dark textiles often contain excess dye and should be washed separately several times before being included in a mixed load. Always wash white and coloured items separately.

Pre-treating stains

■ Badly soiled areas and stains should be cleaned as soon as possible, preferably whilst still fresh. Spillages should be carefully dabbed off using a soft, colourfast cloth. Do not rub.

Useful tip: Stains (e.g. blood, egg, coffee, tea) can be pre-treated using some handy tricks which can be found in the Miele guide to laundry care.

Please contact Miele to obtain a copy of this booklet.

⚠ Damage due to solvent-based cleaning agents.

Cleaning agents containing benzine, stain remover, etc., can damage plastic parts.

When pre-treating garments, make sure that any plastic parts (e.g. buttons) do not come into contact with cleaning agent.

⚠ Risk of explosion due to solvent-based cleaning agents.

If solvent-based cleaning agents are used, an explosive mixture can form.
Never use solvent-based cleaning agents in the washing machine.

General tips

- Curtains: Remove lead weights first or place in a laundry bag.
- Underwiring and collar stiffeners: Any loose wiring in bras, shirt collar stiffeners, etc. should be removed or sewn in.
- Close any zips, attach velcro fasteners, fasten hooks and eyes etc. before washing.
- Fasten duvet covers and pillow cases to prevent small items from being rolled up inside them.

Do not wash any items in this machine which are specified by the manufacturer as **not washable** on the care label (☒ symbol).

2. Selecting a programme

Switching on the washing machine

- Press the  button.

The interior drum lighting will come on.


The drum lighting will go out automatically after five minutes.

Useful tip: To switch the lighting on again, open the pull-down menu from the overview menu and then touch the  sensor.

The main menu will then appear in the display.

Selecting a programme


- Touch the Programmes sensor.

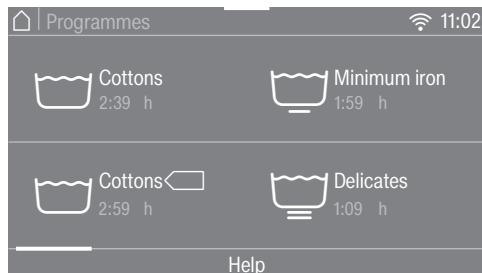

- Scroll to the right of the display until the programme you want appears.

- Touch the sensor for that programme.

The display will change to show the Overview menu.

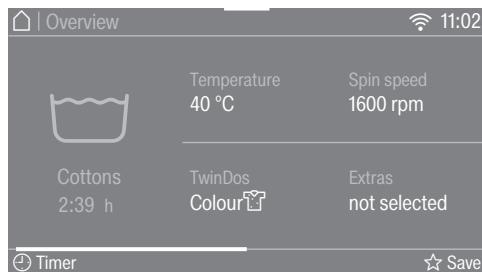

There are 3 further ways of selecting a programme.

1. Favourites
2. Washing assistant
3. MobileControl

3. Selecting programme settings

Selecting the temperature

You can alter the preset temperature of a wash programme.

- Touch the Temperature sensor.
- Select the desired temperature.

The display will change to show the Overview menu.

Selecting a spin speed

You can alter the preset spin speed of a wash programme.

- Touch the Spin speed sensor.
- Select the spin speed you want.

The display will change to show the Overview menu.

Activating TwinDos

TwinDos dispensing is automatically activated for all programmes in which dispensing is possible.

1. Switch TwinDos on or off

- Touch the TwinDos sensor and select Off or On.

2. Select the detergent

When using Miele's 2-phase system you must set the colour of the laundry.

- Select Whites for loads of white items, or Colours for loads containing coloured items.

If you are using a different type of detergent, this must be selected.

- Select compartment ① or ②.

Useful tip: Only those detergents that can be used with the programme are displayed.

3. Select the degree of soiling.

The display will ask you to enter the degree of soiling of the laundry.

- Select Light, Normal or Heavy.
- Confirm your selection with the OK sensor.

Automatic dispensing is now switched on.

The display will change to show the Overview menu.

See "5. Adding detergent - TwinDos" for more information.

3. Selecting programme settings

Selecting Extras

You can supplement the wash programmes with Extras.

- Touch the Extras sensor.
- Select one or more Extras.

Not all Extras can be used with every programme, e.g. Eco and Quick. Extras that cannot be combined are greyed out and cannot be selected.

- Confirm with the OK sensor.

The display will change to show the Overview menu.

See "Extras" for further information.

Activating CapDosing

If you can use CapDosing with a wash programme:

- Touch the CapDosing sensor.
- The types of capsules which can be used with the programme will appear in the display.
- Select the type of capsule you want.

CapDosing is now active.

The display will change to show the Overview menu.

See "5. Adding detergent - CapDosing" for more information.

Stains

In order to clean stained laundry more effectively, you can choose from a list of various types of stains. The wash programme will then adapt to the type of stain selected.

- Touch the Stains sensor.
- Select the type of stains in your load from the list.
- Confirm your selection with the OK sensor.

With some stains, helpful information will also appear in the display when they are selected.

- Confirm the information with OK.

The display will change to show the Overview menu.


Timer

You can use the Timer to set the finish time or the start time for a wash programme.

See "Timer" for further information.

4. Loading the washing machine

Opening the door

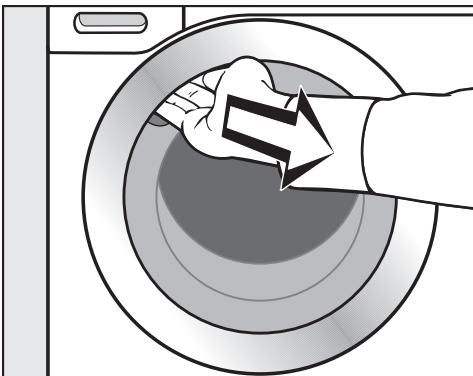

- Reach under the door grip and pull the door open.

Check the drum for pets or foreign objects before loading it with laundry.


The most efficient use of energy and water is achieved when a full load is washed. However, do not overload as this reduces cleaning efficiency and causes creasing.

- Unfold the laundry and load loosely in the drum.


Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning.

Useful tip: The maximum load for the programme selected will appear in the pull-down menu.

Closing the door

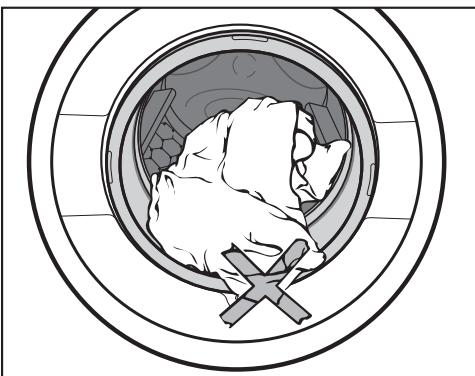

- Make sure that no items are caught between the door and the seal.

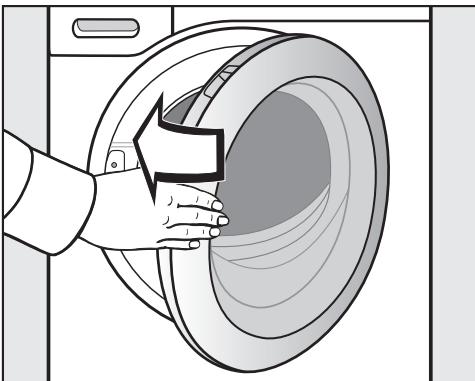

- Shut the door with a gentle swing.

5. Adding detergent

There are several options for adding detergent.

TwinDos

The washing machine is equipped with the TwinDos system.

TwinDos has to be activated as described in "Before using for the first time".

How UltraPhase 1 and UltraPhase 2 work

UltraPhase 1 is a liquid detergent which dissolves dirt and removes the most common stains. UltraPhase 2 is a bleaching agent and removes stubborn stains. For the best washing result, these two agents are dispensed at separate times during the wash process. UltraPhase 1 and UltraPhase 2 clean white and coloured fabrics thoroughly. UltraPhase 1 and UltraPhase 2 single use cartridges are available to order from Miele or via the internet at shop.miele.com (see the end of this booklet for details).

Activating TwinDos dispensing

TwinDos dispensing is automatically activated for all programmes in which dispensing is possible.

Useful tip: The detergent dispensing quantities are preset. If too much foam builds up, the dispensing quantity can be reduced via the  Settings / Programme sequence / TwinDos menu.

Changing TwinDos dispensing


You can change the suggested colour composition of the laundry.

- Touch the TwinDos sensor and select the colour composition of your laundry.

Deactivating TwinDos dispensing

- Touch the TwinDos sensor.
- Touch the Off sensor.

Removing the detergent cartridges

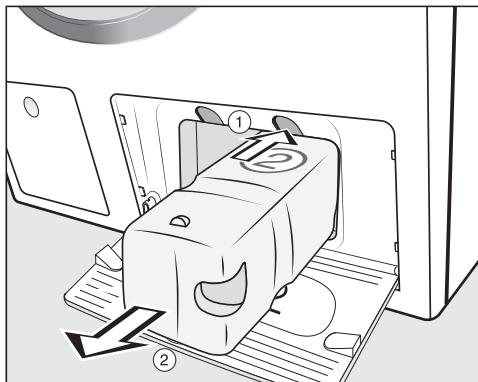

① Press the yellow button above the cartridge to release the lock.

② Pull out the cartridge.

5. Adding detergent

Degree of soiling

The level of soiling in laundry is divided into three settings:

-  Light
No visible soiling or stains
-  Normal
Visibly soiled and/or just a few slight stains
-  Heavy
Heavily soiled and/or stains clearly visible.

The dispensing amount for TwinDos and the amount of water required for rinsing is preset for the  Normal level of soiling.

- Touch the TwinDos sensor to select a different level of soiling.

The amount of detergent and water will be adjusted to suit the selected level of soiling.

Some programmes will not let you set the level of soiling. These programmes are designed for lightly soiled laundry only.

Using other methods to remove stains

If you wish to use additional methods of stain removal, you have the following options:

- Using the Booster cap and activating CapDosing.
- Add stain remover to the  compartment.


5. Adding detergent

Detergent dispenser drawer

Any detergent suitable for automatic front loading washing machines can be used with this appliance. Please observe the instructions for use and dosage on the detergent packaging.

Ensure that TwinDos dispensing is deactivated.

Filling with detergent

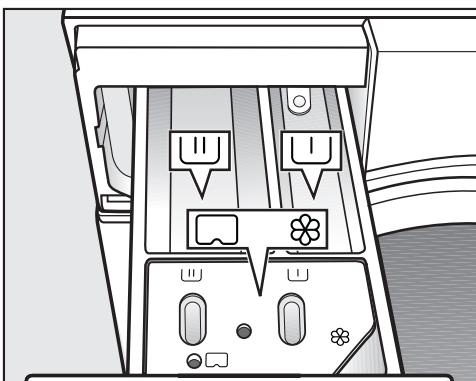

- Pull out the detergent drawer and add detergents to the compartments.


Detergent for the pre-wash (divide the total recommended amount as follows: add $\frac{1}{3}$ to compartment and $\frac{2}{3}$ to compartment)

Detergent for the main wash and soaking

Fabric softener, liquid starch, or capsules

See "Detergent" for further information.

Adding fabric softener

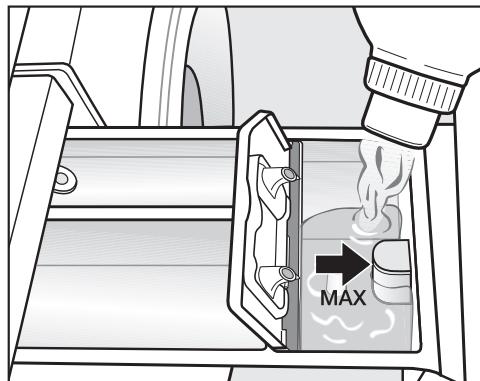

- Add fabric softener or liquid starch to the compartment. **Do not exceed the maximum level mark.**

It will be automatically dispensed in the final rinse. At the end of the programme a small amount of water remains in the fabric softener compartment.

If starching frequently, thoroughly clean the dispenser compartment, especially the siphon tube, regularly.

5. Adding detergent

Tips on dosing

Adjust the detergent dosage to the level of soiling of the laundry and the size of the load. Reduce the amount of detergent with smaller loads (e.g. reduce the amount of detergent by $\frac{1}{3}$ when washing a half load).

Too little detergent results in:

- laundry not getting properly clean and with time it may become grey and hard to the touch.
- a build-up of mould in the washing machine.
- grease not being completely removed from the laundry.
- limescale deposits on the heater elements.

Too much detergent results in:

- poor wash, rinse, and spin results.
- a higher water consumption as an extra rinse cycle is automatically activated.
- a greater burden on the environment.

Using liquid detergent with a pre-wash

Liquid detergent cannot be used for the main wash if the pre-wash has been selected.

Use TwinDos dispensing if you are activating the pre-wash.

Using detergent tablets or pods

Always put detergent tablets or pods directly in the drum with the laundry. They cannot be added via the detergent dispenser drawer.

See “Detergent” for further information on detergents and dosage.

5. Adding detergent

CapDosing

If you selected CapDosing when setting the programme, detergent will be dispensed via the capsule for this wash programme.

Only one capsule can be selected per wash programme.

Three different types of capsule are available:

- ❖ = Fabric care (e.g. fabric softener)
- ❖ = Additives (e.g. detergent enhancers)
- ❖ = Detergent (for the main wash only)

Depending on the setting selected, the detergent, additive or fabric care agent will be dispensed via the capsule.

Each capsule contains the correct amount for one wash cycle.

Caps are available to order from Miele or from the Miele online shop (see the end of this booklet for contact details).


⚠ Capsules pose a health risk.

The ingredients of capsules can be hazardous to health if they are swallowed or come into contact with skin.


Keep capsules out of the reach of children.

Inserting a capsule

- Open the detergent dispenser drawer.

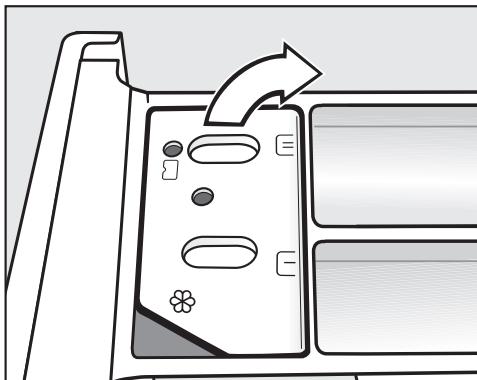


- Open the lid of the ❖/❖ compartment.

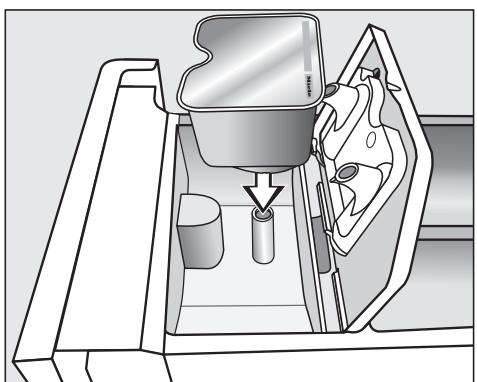

- Press the capsule in firmly.

5. Adding detergent

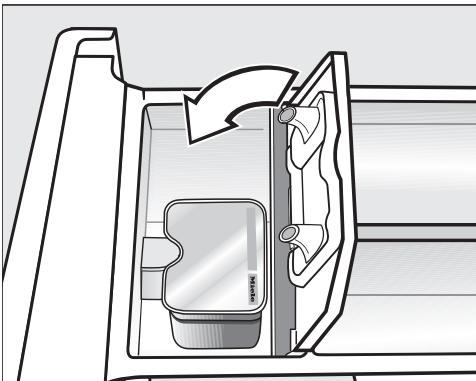

- Close the lid and press it firmly shut.
- Close the detergent dispenser drawer.

The capsule is opened by the act of inserting it in the detergent dispenser drawer. The contents can run out of the capsule if you then remove it from the drawer before it is used. Dispose of opened capsules.

The wash programme will dispense the contents of the capsule at the correct time.

Water intake to the compartment is solely via the capsule.
Do not add any additional fabric softener to the compartment.

- Remove the empty capsule at the end of the programme.

For technical reasons a small amount of water will remain in the capsule.

6. Starting the programme - the end of the programme


Starting a programme

The programme can be started when the *Start/Stop* sensor is flashing on and off.

- Touch the *Start/Stop* sensor.

The door will lock ( will appear in the display) and the programme will start.

The programme status will appear in the display.

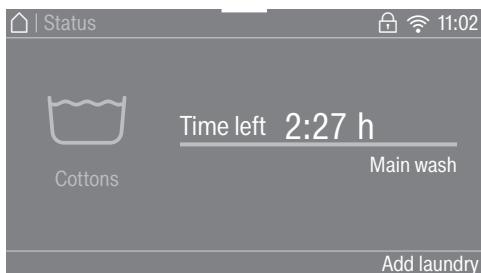

The washing machine will keep you updated on the programme status and the time remaining for the programme to run.

If a Delay start time has been selected, this will count down in the display until the programme starts.

The drum lighting switches off once the programme has started.

At the end of the programme

The door remains locked during the Anti-crease phase and Finish/Anti-crease and Unlock with "Start/Stop" appear in the display.

- Touch the *Start/Stop* sensor. The door will be unlocked.


The door unlocks automatically at the end of the Anti-crease phase.

- Pull open the door.

- Remove the laundry.

Items left in the drum could discolour other items in the next wash or become discoloured themselves.

Remove all items from the drum.

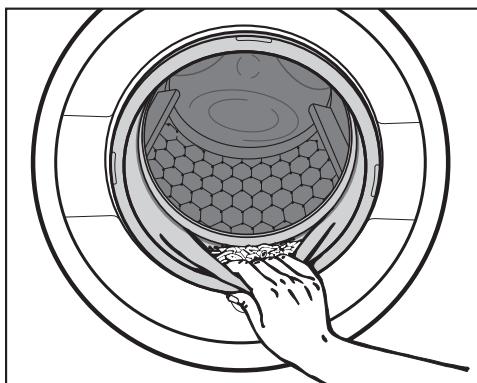

- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.

Useful tip: For safety reasons, close the door when the washing machine is not in use. Otherwise there is a danger of objects being placed inadvertently in the drum. If these remain unnoticed and were washed in the next load, they could damage the laundry. An open door is also a danger to pets and children.

- Switch the washing machine off with the  control.
- If applicable, remove the used capsule from the detergent dispenser drawer.

Useful tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

Spinning

Final spin speed in the programme

When a programme is selected, the optimum spin speed for this wash programme will appear in the display.

A faster spin speed can be selected for certain wash programmes.

The highest selectable spin speed is indicated in the table.

Programme	rpm
Cottons	1600
Cottons 	1600
Minimum iron	1200
Delicates	900
QuickPowerWash	1600
Automatic plus	1400
Woollens 	1200
Silks 	600
Express 20	1200
Shirts	900
Denim	900
Dark garments	1200
Sportswear	1200
Trainers	600
Outerwear	800
Proofing	1000
Down filled items	1200
Down duvets	1200
Pillows	1200
Cottons hygiene	1600
Curtains	600
First wash	1200
Separate rinse	1600
Starch	1200
Drain/Spin	1600
Clean machine	900

Omitting the final spin (Rinse hold)

If Rinse hold is selected, the laundry remains in the water following the final rinse cycle. This helps prevent creasing if the laundry is not going to be removed from the drum immediately after the end of the programme.

- Select the Rinse hold Extra.

Starting the final spin

You can reduce the spin speed.

- Touch the Change spin speed sensor.
- Select the desired spin speed.
- Start the final spin with the *Start/Stop* control.

Ending the wash programme

Select this option if you want to remove the laundry when it is dripping wet and without having been spun.

- Touch the Change spin speed sensor.
- Select Spin speed 0 rpm (no spin).
- Touch the *Start/Stop* sensor.

The water will be pumped away.

Rinse and interim spin

There is a spin cycle after the main wash and between the rinses. A reduction in the final spin speed will also reduce the interim spin speed.

Omitting interim spin and the final spin

- Touch the Spin speed sensor.
- Select the 0 rpm setting.

After the last rinse, the water will be pumped away and the Anti-crease phase will switch in.

In some programmes an additional rinse is introduced with this setting.

Programme chart

Cottons		Cold to 90°C	Max. load 9.0 kg
Items		Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.	
Notes		<ul style="list-style-type: none"> – The <i>Cottons 60°/40 °C</i> programme has a shorter programme duration, longer temperature holding times and higher energy consumption than the <i>Cottons <60°C/<40°C</i> programme. – Where particularly high levels of hygiene are required, please select a temperature of 60°C or higher. 	
Cottons			Max. load 9.0 kg
Items		Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.	
Notes		With <60°C the actual wash temperature reached will be lower than 60°C although the wash performance is the same as with the standard Cottons 60°C programme.	
Cottons			Max. load 9.0 kg
Items		Normally soiled cotton garments.	
Notes		These settings are the most efficient in terms of energy and water consumption for washing cottons.	
Energy labelling programme according to AS/NZS 2040.1 & AS/NZS 2040.2			
Minimum iron		Cold to 60°C	Max. load 4.0 kg
Items		Synthetic, mixed fibre and easy care cotton.	
Notes		Reduce the spin speed for fabrics which crease easily.	
Delicates		Cold to 60°C	Max. load 3.0 kg
Items		Delicate garments made from synthetic fibre, mixed fibre, rayon and viscose.	
Notes		For items which crease easily, deselect the spin.	

Programme chart

QuickPowerWash		40°C – 60°C	Max. load 5.0 kg
Items	Lightly soiled garments which are also suitable for washing in the <i>Cottons</i> programme.		
Notes	A special saturation process and wash rhythm ensure that the laundry is cleaned particularly quickly and thoroughly.		
Automatic plus		Cold to 40°C	Max. load 6.0 kg
Items	Mixed loads of garments suitable for the <i>Cottons</i> and <i>Minimum iron</i> programmes. Sort according to colour.		
Notes	The wash parameters (e.g. water level, wash rhythm and spin speed) are adjusted automatically in this programme to ensure the best possible care and wash result for each item.		
Woollens 		Cold to 40°C	Max. load 2.0 kg
Items	Machine-washable or hand-washable wool or wool blend fabric. If the care label does not specify a temperature, wash using the cold setting.		
Notes	Reduce the spin speed for items which crease easily.		
Silks 		Cold to 30°C	Max. load 1.0 kg
Items	Silks and other hand-washable fabrics with no wool content, e.g. satin, lace and silk.		
Notes	Place tights, bras etc. in a washing bag.		
Express 20		Cold to 40°C	Max. load 3.5 kg
Items	Cotton garments that have hardly been worn or are only very lightly soiled.		
Notes	The <i>Quick Extra</i> is activated automatically.		

Programme chart

Shirts		Cold to 60°C	Max. load 1.0 kg/2.0 kg
Items		Shirts and blouses made of cotton and mixed fibre.	
Notes		<ul style="list-style-type: none"> – Pre-treat collars and cuffs if necessary. – Wash silk shirts and blouses in the <i>Silks</i>  programme. – If the preset <i>Pre-ironing</i> option is switched off, the maximum load capacity is increased to 2.0 kg. 	
Denim		Cold to 60°C	Max. load 3.0 kg
Notes		<ul style="list-style-type: none"> – Wash denim inside-out. – Denim often contains excess dye and may run during the first few washes. Wash light and dark coloured items separately. – Close any zips, do up buttons etc. before washing. 	
Dark garments		Cold to 60°C	Max. load 3.0 kg
Items		Black and dark items made of cotton or mixed fibres.	
Notes		Wash inside-out.	
Sportswear		Cold to 60°C	Max. load 3.0 kg
Items		Sportswear such as singlets and leggings as well as microfibre and fleece garments.	
Notes		<ul style="list-style-type: none"> – Do not use fabric softener. – Observe the manufacturer's care label. 	
Trainers		Cold to 40°C	Max. 2 pairs of shoes
Items		Sport shoes only (not leather shoes).	
Notes		<ul style="list-style-type: none"> – Observe the instructions on the care label. – Brush coarse soiling off first. – Close Velcro fasteners. – Do not use fabric softener. – Use the drying basket for tumble drying. 	

Programme chart

Outerwear		Cold to 40°C	Max. load 2.5 kg
Items		Performance outerwear (e.g. jackets and trousers) made from membrane fabric such as Gore-Tex®, SYMPATEX®, WINDSTOPPER® etc.	
Notes		<ul style="list-style-type: none"> – Zip up or close jackets before washing. – Do not use fabric softener. – If required, these garments can also be re-proofed using the <i>Proofing</i> programme. Proofing should not be done every time the garment is washed. 	
Proofing		40°C	Max. load 2.5 kg
Items		Treating microfibre fabric, skiwear and table linen made from mainly synthetic fibres to provide a water and dirt resistant finish.	
Notes		<ul style="list-style-type: none"> – The items should be freshly laundered and spun or dried before proofing. – For best results, the items should be heat-treated afterwards either in a tumble dryer or by ironing. 	
Down filled items		Cold to 60°C	Max. load 2.0 kg
Items		Jackets, sleeping bags, pillows and other down-filled items.	
Notes		<ul style="list-style-type: none"> – Remove air from the items before washing to prevent an excessive build-up of foam. To do this, either push the items into a narrow laundry bag to compress them or tie the items together with a washable strap. – Please observe the instructions on the wash care label. 	

Programme chart

Down duvets		Cold to 60°C	Max. load 2.5 kg 1 down duvet 2.20 m x 2.00 m
Items	Quilts, duvets and pillows with feather or down filling.		
Notes	<ul style="list-style-type: none">– Remove air from the items before washing to prevent an excessive build-up of foam. To do this, either push the items into a narrow laundry bag to compress them or tie the items together with a washable strap.– Please observe the instructions on the wash care label.		
Pillows		Cold to 60°C	2 pillows (40 x 80 cm) or 1 pillow (80 x 80 cm)
Items	Synthetic filled washable pillows.		
Notes	<ul style="list-style-type: none">– Remove air from the items before washing to prevent an excessive build-up of foam. To do this, either push the items into a narrow laundry bag to compress them or tie the items together with a washable strap.– Please observe the instructions on the wash care label.		
Cottons hygiene		60°C to 90°C	Max. load 9.0 kg
Items	Cotton or linen with direct skin contact or for which special hygiene requirements apply, e.g. underwear, bed linen, encasing products.		
Notes	<ul style="list-style-type: none">– Temperature holding times are longer than in the <i>Cottons</i> programme.– Observe the instructions on the care label.		

Programme chart

Curtains		Cold to 40°C	Max. load 2.0 kg
Items		Curtains, including net curtains, specified as machine-washable by the manufacturer.	
Notes		<ul style="list-style-type: none"> – To remove dust, the <i>Pre-wash Extra</i> is selected automatically. – For curtains which crease easily, reduce the spin speed or deselect the spin. – Remove weights from curtains. 	
First wash		Cold to 40°C	Max. load 2.0 kg
Items		New items made of cotton, towelling and polyester fabric.	
Notes		Use this programme to wash any manufacturing residues out of new items.	
Separate rinse		Max. load 8.0 kg	
Items		For rinsing hand-washed items.	
Notes		Reduce the spin speed for items which crease easily.	
Starch		Max. load 8.0 kg	
Items		Starching table cloths, serviettes and workwear.	
Notes		<ul style="list-style-type: none"> – Reduce the spin speed for items which crease easily. – Laundry that is to be starched should be washed but not treated with fabric softener. 	
Drain/Spin		Max. load 8.0 kg	
Notes		<ul style="list-style-type: none"> – Drain only: Select 0 rpm for the spin speed. – Make sure you select the appropriate spin speed. 	

Programme chart

Maintenance

The washing machine has two maintenance programmes.

1. Clean machine for cleaning the washing machine.
2. Clean "TwinDos" for maintenance of the TwinDos compartments ①/②. See "Cleaning and care – TwinDos maintenance" for more details.

Clean machine	85°C	No load
With frequent washing at low temperatures there is a danger of a build-up of bacteria in the washing machine.		
Cleaning the washing machine will significantly reduce bacteria, mould, and biofilm and prevent the build-up of unpleasant odours.		
Notes	<ul style="list-style-type: none">– Optimum results can be achieved by using the Miele IntenseClean machine cleaner. Alternatively, a universal powder detergent can be used.– Dispense the washing machine cleaner or universal detergent directly in the drum.– Do not load any laundry. The drum must be empty for this machine maintenance wash.	

Garment care label symbols

Washing	
The figure quoted in the symbol is the maximum temperature at which the garment can be washed. The number of bars under the symbol indicates the level of agitation permitted.	
	No bar under the symbol = normal agitation
	One bar under the symbol = reduced agitation
	Two bars under the symbol = much reduced agitation
	Hand wash (If no temperature is specified, use the lowest temperature or cold)
	Do not wash

Drying	
The number of dots indicates the drying temperature.	
	Normal temperature
	Low temperature
	Do not tumble dry

Ironing	
The number of dots indicates the ironing temperature.	
	approx. 200°C
	approx. 150°C
	approx. 110°C
Do not steam iron garments carrying this symbol as this could cause irreversible damage.	
	Do not iron

Programme selection examples

Programme	Garment care label symbols
Cottons	
Minimum iron	
Delicates	
Woollens	
Silks	
Express 20	
Automatic plus	

Professional cleaning	
	Dry clean only. The letters indicate the type of cleaning agent required.
	Professional Wet Clean only
	Do not dry clean

Bleaching	
	Any oxidising bleaching agent can be used
	Only use an oxygen based bleach or a non-chlorine bleach
	Do not bleach

Extras

You can use the Extras sensors to augment the wash programmes.

Quick

The programme duration is reduced. Mechanical action and energy usage are increased.

Eco

The Eco Extra helps to save energy. The wash temperature is reduced and the wash duration is increased in return. The wash programme continues to provide excellent results.

Water plus

The water level in the main wash and the rinses will be increased if the Water plus Extra is selected.

You can select by how much the water level is increased (see "Settings - Water plus level").

Extra rinse

An additional rinse cycle can be carried out to give a better rinse result.

SingleWash

For efficiently washing a very small load (< 1 kg) in a normal wash programme. The wash duration is reduced.

Please note the following advice:

- Use liquid detergent
- Reduce the dosage to a maximum of 50% of the amount quoted for a ½ load

Pre-ironing

In order to reduce creasing, the laundry undergoes a smoothing process at the end of the programme. Reducing the maximum load by 50% will give a better result. Follow the instructions in the display. Small loads give a better result.

The garments must be suitable for drying in a tumble dryer ☒ ☒ and suitable for ironing ☛ ☛.

Pre-wash

For laundry with large amounts of dirt, e.g. dust and sand.

Soak

For heavily soiled and stained items with protein stains.

A duration of between 30 minutes and 6 hours can be chosen for the soak process in 30-minute increments. See “Settings” for more information.

The factory default setting is 30 minutes.

Intensive

For hard-wearing laundry that is very heavily soiled. Cleaning efficiency is increased through more intense mechanical action and the application of more heat energy.

AllergoWash

This option should be used where high standards of hygiene are required. More energy is used to lengthen temperature holding times and more water is used to increase rinsing efficiency. The items must be suitable for drying in a tumble dryer ☀ ☇ and suitable for ironing ☁ ☉.

Extra gentle

Drum rotation and wash duration are reduced. Lightly soiled fabrics are washed more gently.

Extra quiet

This option reduces noise levels during the wash programme. Use this if you want to wash during quiet periods (for instance when children are sleeping). The final spin is automatically reduced to ↘ (Rinse hold). The programme duration is increased.

Rinse hold

The laundry is not spun after the final rinse and remains in the final rinse water. This helps prevent creasing if the laundry is not going to be removed from the drum immediately after the end of the programme.

Not all the Extras can be used with every programme. If an Extra is not permitted for a wash programme, it will not be shown in the display. See “Wash programme chart - Extras”.

Wash programme chart - Extras

	Quick	Eco	Water plus	Extra rinse	SingleWash	Pre- ironing
Cottons	X	X	X	X	X	X
Cottons 	X	-	X	X	X	X
Minimum iron	X	X	X	X	X	X
Delicates	X	X	X	X	X	X
QuickPowerWash	✓	-	-	-	X	X
Automatic plus	X	X	X	X	X	X
Woollens 	-	-	-	-	X	-
Silks 	-	-	-	-	X	-
Express 20	✓	-	-	-	-	X
Shirts	X	X	X	X	X	✓
Denim	X	X	X	X	X	X
Dark garments	X	X	X	X	X	✓
Sportswear	X	X	X	X	X	X
Trainers	-	-	X	-	-	-
Outerwear	X	X	X	X	-	-
Proofing	-	-	-	-	-	-
Down Items	X	X	X	X	-	-
Down duvets	X	X	X	X	-	-
Pillows	X	X	X	X	-	-
Cottons hygiene	X	X	X	X	-	X
Curtains	X	X	X	X	-	X
First wash	-	-	X	X	X	X
Separate rinse	-	-	X	-	-	-
Starch	-	-	X	-	-	-

X = can be selected

- = cannot be selected

✓ = activated automatically

None of the Extras can be selected with programmes which are not listed in the chart.

Wash programme chart - Extras

Pre-wash	Soak	Intensive	AllergoWash	Extra gentle	Extra quiet	Rinse hold
X	X	X	X	X	X	X
X	X	X	X	X	X	X
X	X	X	X	X	X	X
X	X	-	X	X	X	X
-	-	-	-	-	-	X
X	X	-	X	X	X	X
-	-	-	-	-	X	X
-	-	-	-	-	X	X
-	-	-	-	-	-	X
X	X	-	X	X	X	X
X	X	-	X	X	X	X
X	X	-	X	X	X	X
X	X	-	X	X	X	X
-	-	-	-	-	X	X
X	X	-	-	X	X	X
-	-	-	-	-	-	X
X	-	-	X	X	X	X
X	-	-	X	X	X	X
X	X	-	X	X	X	X
X	-	-	X	X	X	X
-	-	-	-	X	X	X
-	-	-	-	-	-	X
-	-	-	-	-	-	X

Programme sequence

	Main wash		Rinse		Spin
	Water level	Wash rhythm	Water level	Rinses	
Cottons		(A)		2-5 ¹⁾²⁾³⁾	✓
Cottons		(A)		2-5 ²⁾³⁾	✓
Minimum iron		(B)		2-4 ²⁾³⁾	✓
Delicates		(C)		2-4 ²⁾³⁾	✓
QuickPowerWash		(A)		1	✓
Automatic plus		(A)(B)		2-4 ²⁾³⁾	✓
Woollens		(E)		2	✓
Silks		(E)		2	✓
Express 20		(A)		1	✓
Shirts		(C)		3-4 ³⁾	✓
Denim		(B)		2-4 ²⁾³⁾	✓
Dark garments		(B)		3-5 ²⁾³⁾	✓
Sportswear		(C)		2-3 ³⁾	✓
Trainers		(D)		2	✓
Outerwear		(C)		3-4 ³⁾	✓
Proofing	-	(B)		1	✓
Down filled items ⁴⁾		(C)		3-4 ³⁾	✓
Down duvets ⁴⁾		(C)		3-4 ³⁾	✓
Pillows ⁴⁾		(C)		3-4 ³⁾	✓
Cottons hygiene		(A)		3-5 ²⁾³⁾	✓
Curtains		(C)		3-4 ³⁾	✓
First wash		(B)		2-3 ³⁾	✓
Separate rinse	-	-		2	✓
Starch		(B)	-	-	✓

	= low water level
	= medium water level
	= high water level
(A)	= intensive rhythm
(B)	= normal rhythm
(C)	= sensitive rhythm
(D)	= ultra sensitive rhythm
(E)	= handwash rhythm
✓	= carried out
-	= not carried out

This washing machine has fully electronic controls with automatic load control. The washing machine takes in the right amount of water required for the programme depending on the amount of laundry and its absorbency rate.

The programme sequences outlined in the chart are based on the basic programme with a full load.

The washing machine programme sequence display shows which stage of the programme has been reached.

Special features in the programme sequence

Anti-crease:

At the end of the programme the drum continues to turn at intervals for up to 30 minutes to help prevent creasing.

Exception: There is no anti-crease phase in the *Woollens*  and *Silks*  programmes.

The door can be opened at any time during the anti-crease phase.

¹⁾ If a temperature of 60°C or higher is selected, two rinses are carried out. If a temperature of less than 60°C is selected, three rinses are carried out.

²⁾ An additional rinse is carried out if:

- there is too much foam in the drum.
- a spin speed lower than 700 rpm has been selected.

³⁾ An additional rinse is carried out if:

- The Extra rinse Extra has been selected.

⁴⁾ Run-up to spin: A run-up to spin is carried out before the wash process begins to deflate down-filled items. Subsequent water intake for the main wash is through compartment .

Programme sequence

PowerWash 2.0

PowerWash 2.0, a washing technique developed by Miele, is activated in the following programmes with small and medium-sized loads:

- Cottons
- Minimum iron
- Shirts
- Automatic plus

How it works

Conventional washing techniques wash with more water than the laundry can absorb. This total volume of water needs to be heated.

The PowerWash 2.0 washing technique only uses slightly more water than the laundry can absorb. The water which has not been absorbed by the laundry heats up the drum and the laundry and is sprayed into the laundry over and over again. This reduces the amount of energy used.

Activation

The washing machine calculates the load at the beginning of the wash programme. PowerWash 2.0 is activated if the following conditions are present:

- There is a small to medium-sized laundry load in the drum.
- The temperature selected does not exceed 60°C.

- The final spin speed selected must not be lower than 600 rpm.
- CapDosing (⌚, ☔) has not been selected for the main wash.

With some options (e.g. Pre-wash, Water plus) PowerWash 2.0 is not activated.

Special features

– Drenching phase

The washing machine will spin a few times at the beginning of the programme. During spinning, the water discharged is sprayed back into the laundry in order to achieve optimum moisture penetration.

The optimum water level is set at the end of the drenching phase. If necessary, the washing machine will pump water away and take in a little more fresh water.

– Noises during the heating phase

Unusual bubbling noises can occur while the laundry and the drum are being heated.

Changing the programme sequence

Cancelling a programme

You can cancel a programme at any time after it has started.

- Touch the *Start/Stop* sensor.

The following will appear in the display:

i Cancel the programme?

- Select Yes.

The following will appear in the display:

Programme cancelled.

The suds will be pumped away.

- Wait until the door unlocks.
- Pull open the door.
- Remove the laundry.

Selecting another programme

- Close the door.
- Select the required programme.
- Add detergent to the detergent dispenser drawer, if necessary.
- Touch the *Start/Stop* sensor.

The new programme will begin.

Interrupting a programme


- Switch the washing machine off with the \odot control.
- Switch the washing machine back on with the \odot control to continue with the same programme.

Changing a programme

After the start of a programme it is no longer possible to select a different programme.

Adding or removing laundry

You can add or remove items during the first few minutes after the programme has started.

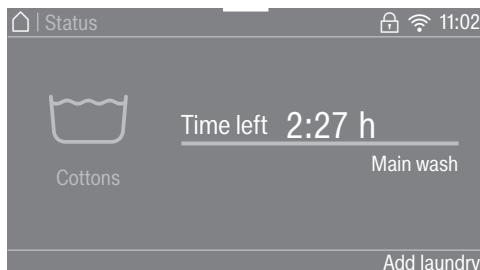

- Touch the *Add laundry* sensor.

If the message *Add laundry* is not visible in the display, then it is no longer possible to add items of laundry.

The programme will stop and the door will unlock.

- Pull open the door.
- Add laundry or remove individual items.
- Close the door.
- Touch the *Start/Stop* sensor.

The wash programme will continue.

Favourite programmes

Creating a Favourite programme

You can save your own customised wash programmes under names of your choice.

There are two ways to create a Favourite programme.

Option 1

- The main menu must be visible in the display. Touch the Favourites sensor.

The display will change to show the Favourites menu.

- Touch the Create sensor.

The display will change to show the Create Favourites menu.

- Select the required programme.
- Select all the programme settings you want.
- Then select Save.

- Enter a name.

Option 2

You can save a programme which has been selected as a Favourite programme before you start it.

- Before the programme starts, touch the  Save sensor.
- Enter a name.

If 12 Favourites have already been saved, the Create or  Save sensor will not be visible. Delete an existing Favourite if you wish to create a new one.

Entering a name

It is best to select short, memorable names.

- Touch the letters or characters you want.
- Confirm with the Save sensor.

The wash programme will then be saved to the Favourites programme list.

Changing a Favourite programme


You can rename, delete or move a Favourite programme.

- Select Favourites from the main menu.
- Touch the Favourite programme that you wish to change until the Context menu opens.
- Select Rename, Delete or Move.

The washing assistant helps you with loads consisting of items with different care instructions. The washing machine will use the list of items to put together a suitable wash programme.

- Scroll to the second page in the main menu.
- Touch the Washing assistant sensor.

A list of items will appear.

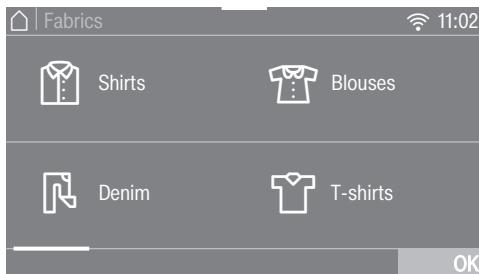

- Touch the appropriate sensor for your item of laundry.

The item selected will be highlighted orange. You can select several items.

With some items, helpful information will also appear in the display when they are selected.

- Confirm with the OK sensor.
- Follow the instructions in the display.

A summary of the selected parameters will then appear in the display.

- Confirm with the OK sensor or select Change if you would like to make any changes.

The programme which has been tailored to your laundry is ready to start.

Useful tip: You can add individual programme settings, e.g. *Extras* before you start the programme.

Timer

The Timer can be used to set the time at which a programme starts or finishes. The programme start can be delayed by up to 24 hours.

Setting the Timer

- Touch the  Timer sensor.
- Select the Finish at or Start at option.
- Set the hours and the minutes and confirm your entry with the  OK sensor.

Changing the Timer

The selected times for the Timer can be changed before the programme starts.

- Touch the  or  sensor.
- Change the specified time and confirm with the  OK sensor.

Deleting the Timer

The selected time for the Timer can be deleted before the programme starts.

- Touch the  or  sensor.

The selected time for the Timer appears in the display.

- Touch the Delete sensor.
- Confirm with the  OK sensor.

The selected time for the Timer is now deleted.

Starting the Timer

- Touch the *Start/Stop* sensor.

The door will lock and the time the programme starts will appear in the display.

After the programme has started, the selected time can only be changed or cancelled by interrupting the programme.

The programme can now be started.

- Touch the *Start immediately* sensor.

SmartStart

The *SmartStart* function (only functional in selected countries) lets you define a period of time during which your washing machine will start automatically. The appliance will start on receipt of a signal, e.g. from your energy supplier, that indicates that the electricity tariff is particularly economical.

This function is active when the SmartGrid setting is switched on.

The timeframe can be defined between 1 minute and 24 hours. During this period, the washing machine waits for the signal from the energy supplier. If no signal is sent during the defined period, the washing machine starts the wash programme.

Setting the timeframe

If you have activated the SmartGrid function in Settings, *SmartStart* by or *SmartFinish* by will appear in the display instead of Start at or Finish at when you touch the  Timer sensor (see “Settings – SmartGrid”).

The procedure for setting this is the same as for setting the time for Delay start.

- Now set the time you want and confirm with the **OK** sensor.
- Touch the *Start/Stop* sensor to start the wash programme with *SmartStart*.

The selected programme will start automatically, as soon as the energy provider has sent the signal, or the latest calculated start time has been reached.

The procedure for changing or deleting the *SmartStart* function is the same as described for the Delay start function.

Detergent

The correct detergent

All detergents produced for automatic front loading washing machines are suitable. Follow the manufacturer's instructions and dosage recommendations on the packaging.

The right amount to dispense will depend on the following:

- The soiling level of the laundry.
- The quantity of laundry.
- The water hardness level. Check with your local water authority if you do not know the water hardness level in your area.

Detergent dispensing aids

Use dispensing aids (e.g. balls) if these are supplied with the detergent, particularly when using liquid detergent.

Refill packs of detergent

When purchasing detergent, buy refill packs wherever possible. This helps reduce the amount of waste packaging.

Fabric softeners and liquid starch

Fabric softeners

make garments soft to handle and help prevent static cling when tumble drying.

Fabric shapers

are synthetic starches and give an even stiffer hold.

Starch

stiffens and gives body to items of laundry, e.g. shirts, tablecloths and bed linen.

Adding fabric softener or liquid starch separately

Prepare the starch in accordance with the manufacturer's instructions on the packaging.

Useful tip: When adding fabric softener, activate the Water plus Extra.

Dispensing via the detergent dispenser drawer

- Add fabric softener to the  compartment or insert the appropriate capsule.
- Add liquid starch to the  compartment and powder or viscous starch to the  compartment.
- Select the Separate rinse or Starch programme.
- Change the spin speed if necessary.
- If using a capsule, touch the CapDosing sensor and activate the Cap.
- Touch the Start/Stop sensor.

TwinDos dispensing

One of the automatic dispensing containers must be filled with fabric softener.

- Select the Separate rinse programme.
- Change the spin speed if necessary.
- Touch the TwinDos sensor.
- Touch the On sensor to activate TwinDos.
- Touch the Start/Stop sensor.

Colour run and dye removers/dyes

 Damage due to colour run/dye removers.

Colour run and dye removers can cause corrosion in the washing machine.

Do not use colour run or dye removers in this washing machine.

Dyes suitable for use in domestic washing machines can be used. However, please note that the salt used in the dyeing process can cause corrosion to stainless steel components in the machine if you use dye frequently. Always observe the manufacturer's instructions carefully.

When using the machine to dye fabric, it is essential to select the Water plus Extra.

Detergent

Miele recommended detergents

Miele detergents and care products have been specially designed for Miele washing machines. They are available to order via the internet at shop.miele.com (depending on country) or from Miele.

	Miele UltraPhase 1 / 2	Miele Cap ⚪	Miele Cap ⚫	Miele Cap 🌸
Cottons	✓	-	(D)	(E)
Minimum iron	✓	-	(D)	(E)
Delicates	✓	(C)	(D)	-
QuickPowerWash	✓	-	-	-
Automatic plus	✓	-	(D)	(E)
Woollens 	-	(C)	-	-
Silks 	-	(C)	-	-
Express 20	✓	-	(D)	-
Shirts	✓	-	(D)	(E)
Denim	✓	-	(D)	-
Dark garments	✓	-	(D)	-
Sportswear	-	(A)	-	-
Trainers	✓	-	-	(H)
Outerwear	-	-	-	-
Proofing	-	-	-	-
Down filled items	-	(B)	-	-
Down duvets	-	(B)	-	-
Pillows	✓	-	-	-
Curtains	✓	-	-	(E)
First wash	✓	-	(D)	-
Separate rinse	-	-	(D)	-

✓ Recommended

A Sportswear

D Fabric Softener

- Not recommended

B Down items

E Booster

© WoolCare

The recommendations apply to the temperature ranges given in the Programme chart.

	Universal	Colour	Delicates and woollens	Special detergent
Cottons	✓	✓	-	-
Minimum iron	-	✓	-	-
Delicates	-	-	✓	-
QuickPowerWash	✓	✓	-	-
Automatic plus	-	✓	-	-
Woollens 	-	-	✓	✓
Silks 	-	-	✓	✓
Express 20	-	✓ ¹⁾	-	-
Shirts	✓	✓	-	-
Denim	-	✓ ¹⁾	-	✓
Dark garments	-	✓ ¹⁾	-	✓
Sportswear	-	-	✓	✓
Trainers	-	✓	-	-
Outerwear	-	-	✓	✓
Down filled items	-	-	✓ ¹⁾	✓
Down duvets	-	-	✓	✓
Pillows	-	-	✓ ¹⁾	✓
Curtains	✓ ²⁾	-	-	✓
First wash	-	✓	-	-
Clean machine	✓ ²⁾	-	-	✓

✓ Recommended

- Not recommended

¹⁾ Liquid detergent

²⁾ Powder detergent

Cleaning and care

External casing and fascia panel

⚠ Risk of electric shock!

Mains voltage is present when the washing machine is switched off. Disconnect the machine from the electricity supply before cleaning or maintenance.

⚠ Risk of damage due to ingress of water.

The pressure of a water jet can cause water to get into the washing machine, resulting in damage to components.

Do not spray the washing machine with a water jet.

- Clean the casing and control panel with a mild cleaning agent or soap and water and dry both with a soft cloth.
- The drum can be cleaned using a suitable stainless steel cleaning agent following the manufacturer's instructions on the packaging.

⚠ Damage caused by cleaning agents.

Solvent based cleaning agents, abrasive cleaners, glass cleaners or multi-purpose cleaning agents can cause damage to plastic surfaces and other parts.


Do not use any of these cleaning agents.

Cleaning the detergent dispenser drawer

Washing at low temperatures and the use of liquid detergent can lead to a build-up of bacteria in the detergent dispenser drawer.

- Clean the entire drawer at regular intervals for hygiene reasons, even if you are using the TwinDos system exclusively.

Removing the detergent dispenser drawer


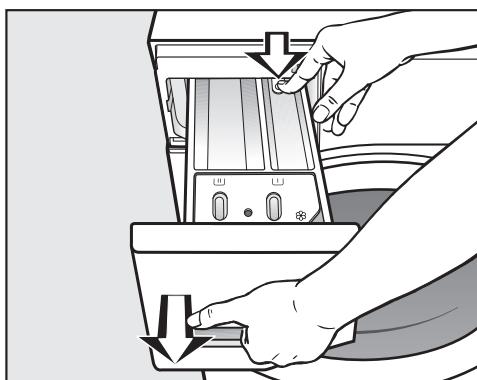


- Pull out the detergent dispenser drawer until a resistance is felt. Press down the release button and at the same time pull the drawer right out of the machine.
- Clean the detergent drawer with warm water.

Cleaning the siphon and the / compartment channel

Liquid starch results in clogging. If clogged, the siphon in the / compartment will not work and the compartment can overflow.


Clean the siphon particularly thoroughly after using liquid starch a few times.

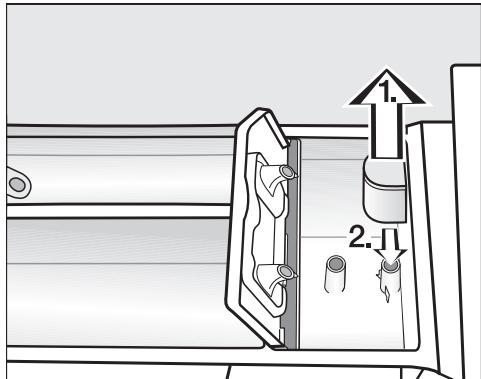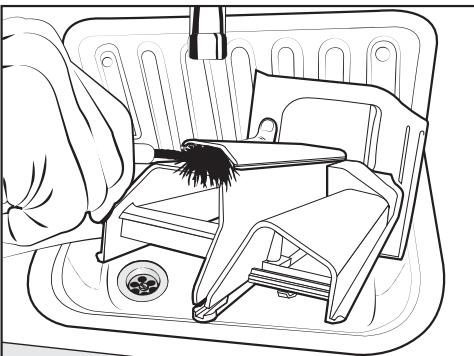

1. Remove the siphon from compartment and clean under warm running water. Clean the siphon tube in the same way.
2. Refit the siphon.

■ Clean the fabric softener channel using a brush and warm water.

Cleaning the detergent dispenser drawer housing

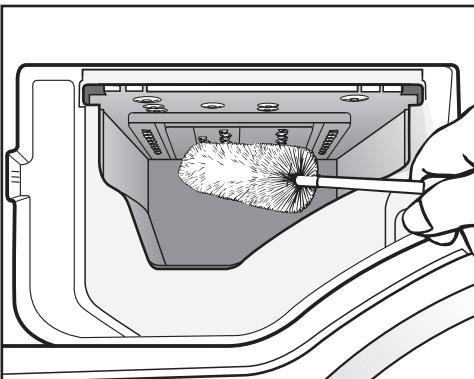

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent dispenser drawer compartment.
- Replace the detergent dispenser drawer.

Useful tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

Cleaning and care

Cleaning the drum (Hygiene info)

Washing at low temperatures and/or using liquid detergent can cause bacteria and unpleasant odours to build up in the washing machine. Use the Clean machine programme to clean the machine. Run this programme regularly or at the latest when the Hygiene info: Select "Maintenance" and start the "Clean machine" programme. message appears in the display.

TwinDos maintenance

 Damage resulting from dried laundry detergent.

If the system has not been used for a long time (more than two months), detergent in the hoses can become viscous or dry out. The hoses can become blocked and would then need to be cleaned by a service technician.

Clean the TwinDos system every time you change the brand of liquid detergent or fabric softener or if the system has not been used for a long period of time.

To clean the system, you either need a "TwinDosCare" cleaning cartridge (only available in selected countries) or an empty TwinDos container. Depending on country, both are available from the Miele online shop.

The washing machine has a cleaning programme for the TwinDos system. Running the cleaning programme will clean the hoses inside the washing machine.

Starting the maintenance programme

- Switch on the washing machine.
- Scroll to the second page in the main menu.
- Touch the Maintenance sensor. The display will then change to show the *Maintenance* menu.
- Select Clean "TwinDos".
- Touch the sensor for the container you want to clean.
- Confirm Start Maintenance programme? with the Yes sensor.
- Follow the instructions in the display.

The hoses will now be cleaned and the TwinDos system can be used again at any time.

Cleaning the compartment


Detergent residue can cause clogging.

- Use a damp cloth to clean the compartment interior when you change the cartridge or container.

Cleaning the water inlet filter

The washing machine has a filter to protect the inlet valve. The filter in the screw connection of the water inlet hose should be cleaned approximately every 6 months, or more often if there are frequent interruptions to the external water supply.

- First turn off the tap.
- Unscrew the inlet hose from the tap.

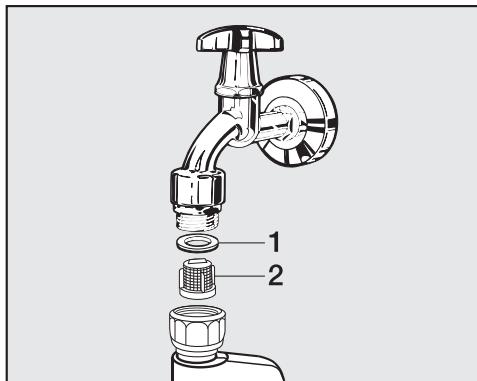

- Remove the rubber seal 1 from the recess.
- Using combination or pointed pliers, take hold of the plastic filter bar 2 and remove it.
- Clean the filter and the seal.

Reassemble the filter and seal in the reverse order and reconnect the hose.

The filter must be put back in place after cleaning.

- Screw the threaded union securely back onto the tap.
- Turn on the tap.

Make sure there is no water leaking from the threaded union.
Tighten the threaded union.

Problem solving guide

With the help of the following guide, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be remedied without contacting Miele. This will save you time and money because you won't need a service call.

Please note that a call-out charge will be applied to unnecessary service visits where the problem could have been rectified as described in these operating instructions.

The programme does not start

Problem	Possible cause and remedy
The control panel remains dark.	<p>There is no power to the machine.</p> <ul style="list-style-type: none">■ Check whether the mains plug is plugged in and switched on.■ Check whether the circuit breaker has tripped. <p>The washing machine has switched off automatically to save energy.</p> <ul style="list-style-type: none">■ Switch the machine back on.
You are asked to enter a code.	<p>Access via a code has been activated.</p> <ul style="list-style-type: none">■ Enter the code and confirm the entry. Deactivate the code if you do not wish this message to appear in the display the next time the machine is switched on.
The following appears in the display:  Door will not lock. Call Miele.	<p>The door is not closed properly. The door lock could not engage.</p> <ul style="list-style-type: none">■ Close the door again.■ Start the programme again. <p>If the fault message appears again, contact Miele.</p>

Fault messages after a programme has been cancelled

Problem	Possible cause and remedy
 Drainage fault. Clean drain filter and pump. Check the drain hose.	<p>The water outlet is blocked or restricted. The drain hose has been fixed too high.</p> <ul style="list-style-type: none"> ■ Clean the filters and the drain pump. ■ The maximum drain height is 1.0 m.
 Water intake fault. Turn on the tap.	<p>The water inlet is blocked or restricted.</p> <ul style="list-style-type: none"> ■ Check whether the tap is turned on properly. ■ Check whether the inlet hose is kinked. ■ Check whether there is sufficient water pressure. <p>The filter in the water inlet is blocked.</p> <ul style="list-style-type: none"> ■ Clean the filter.
 Fault F. If restart fails, call Miele.	<p>There is a fault.</p> <ul style="list-style-type: none"> ■ Disconnect the washing machine from the mains electricity supply, either by switching it off at the wall socket and withdrawing the plug, or by disconnecting it at the circuit breaker. ■ Wait at least 2 minutes before reconnecting the washing machine to the mains electricity supply. ■ Then switch the washing machine on again. ■ Restart the programme. <p>If the fault message appears again, contact Miele.</p>
 Waterproof system activated. Turn off tap and call Miele.	<p>The water protection system has reacted.</p> <ul style="list-style-type: none"> ■ Turn off the tap. ■ Call Miele.

To switch off the fault messages: Switch the washing machine off with the  button.

Problem solving guide

Fault messages at the end of a programme

Problem	Possible cause and remedy
i Check detergent	Excessive foam has built up during washing. <ul style="list-style-type: none">■ Check the amount of detergent dispensed.■ With automatic detergent dispensing, check the dosage amount set.■ Observe the instructions on the detergent packaging and the degree of soiling of the laundry.■ If necessary, reduce the dispensing quantity by increments of 10%.
i Hygiene info: Select "Maintenance" and start the "Clean machine" programme.	A wash programme using a temperature above 60°C has not been run for a long time. <ul style="list-style-type: none">■ In order to prevent bacteria and unpleasant odours building up in the machine, run the <i>Clean machine</i> programme using Miele IntenseClean or powder detergent.
i Check hot water intake	The water inlet for hot water is blocked or turned off. The programme was carried out using cold water. <ul style="list-style-type: none">■ Check whether the tap is turned on properly.■ Check whether the inlet hose is kinked.■ Check whether there is sufficient water pressure.

The messages will appear at the end of the programme and when the washing machine is switched on and need to be confirmed with the *OK* sensor.

Fault messages at the end of a programme

Problem	Possible cause and remedy
i Intensive flow: Clean the filter and jet nozzle or remove foreign objects from the pump housing	<p>The pumps are dirty.</p> <ul style="list-style-type: none">■ Clean the pumps as described in "Problem solving guide - Opening the door in the event of a blocked drain outlet and/or power cut".■ Restart the programme after cleaning.
	<p>The jet in the top of the door ring is blocked with fluff.</p> <ul style="list-style-type: none">■ Remove the fluff with your finger. Do not use any sharp or pointed tools to do this.■ Restart the programme after cleaning.
	<p>If the fault message appears again, contact Miele. The washing machine can still be used but with reduced functionality.</p>
i Align the machine. Laundry not properly spun	<p>The Pre-ironing Extra which runs at the end of the programme could not be carried out properly.</p> <ul style="list-style-type: none">■ Check whether the washing machine is aligned correctly as described in "Installation and connection – Levelling the machine".■ Check whether the maximum delivery height of 1 m has been exceeded.
	<p>If the fault message appears again, contact Miele. The washing machine can still be used but with reduced functionality.</p>

The messages will appear at the end of the programme and when the washing machine is switched on and need to be confirmed with the OK sensor.

Problem solving guide

Messages or faults with the TwinDos system

Problem	Possible cause and remedy
i Only a few more washes possible before a new cartridge is needed for compartment ①.	The detergent in the cartridge is running low. There are between 4 and 8 wash cycles remaining. ■ Order a new cartridge.
i Fit a new cartridge or fill container ①. Check the wash result.	The cartridge is empty. ■ Replace the cartridge. ■ Check whether the laundry is clean. If it is not, there may not have been enough detergent. Wash the items again if necessary.
i Use "TwinDos" or carry out "TwinDos" Maintenance in the "Maintenance" menu. See the operating instruction manual for more information.	TwinDos or automatic dispensing via compartment ① and/or ② has not been used for a long time. ■ Use TwinDos for one of your next loads. ■ Carry out the TwinDos maintenance programme as described in "Cleaning and care - TwinDos maintenance".
⚠ "TwinDos" Maintenance for compartment ① must be started in the "Maintenance" menu. See the operating instruction manual for more information.	TwinDos or automatic dispensing via compartment ① and/or ② has not been used for a long time. It is possible that detergent has dried inside the hoses. ■ Carry out the TwinDos maintenance programme immediately as described in "Cleaning and care - TwinDos maintenance".

The messages shown on this page are examples. They may differ depending on whether they refer to compartment ① or ②.

The messages will appear at the end of the programme and when the washing machine is switched on and need to be confirmed with the OK sensor.

Problems with TwinDos

Problem	Possible cause and remedy
There are dark specks in the liquid detergent.	Mould has developed in the detergent. ■ Pour the liquid detergent out of the container and then clean the container thoroughly.
No detergent and/or fabric softener was dispensed.	Automatic dispensing has not been activated. ■ Touch the TwinDos sensor before running the next programme. Automatic dispensing will be activated. No detergent/fabric softener was dispensed although automatic dispensing was activated. ■ Try again. ■ If detergent is still not dispensed, call Miele.

Problem solving guide

General problems with the washing machine

Problem	Possible cause and remedy
The washing machine smells.	Hygiene info was ignored. A programme using a temperature above 60°C has not been run for a long period of time. <ul style="list-style-type: none">■ In order to prevent bacteria and unpleasant odours building up in the machine, run the <i>Clean machine</i> programme using the Miele IntenseClean washing machine cleaner or powder detergent.
	The detergent dispenser drawer was left closed after washing. <ul style="list-style-type: none">■ Leave the detergent dispenser drawer slightly open to allow it to dry.
The machine shakes during the spin cycle.	The machine feet are not level. <ul style="list-style-type: none">■ Level the machine and adjust the feet correctly.
The laundry has not been spun properly and the laundry is still wet.	The machine detected an imbalance during the final spin and reduced the spin speed automatically. <ul style="list-style-type: none">■ Include both large and small items in the load as this will give better distribution.
The pump makes strange noises.	This is not a fault. These slurping noises occur at the end of the pump sequence as a normal part of operation.
The interior drum lighting does not come on.	The drum lighting will go out automatically after five minutes. <ul style="list-style-type: none">■ Open the pull-down menu from the overview menu and then touch the ☰ sensor.
	The drum lighting is faulty. <ul style="list-style-type: none">■ Call Miele.

Problem solving guide

General problems with the washing machine

Problem	Possible cause and remedy
Large amounts of detergent residue remain in the detergent dispenser drawer.	<p>The water pressure is too low.</p> <ul style="list-style-type: none">■ Clean the filter in the water inlet.■ It may be useful to select the <i>Water plus Extra</i>. <p>Powder detergent used with water softeners can be sticky.</p> <ul style="list-style-type: none">■ Clean the detergent dispenser drawer and in future add washing powder and then add the water softener.
Fabric softener is not completely dispensed or too much water remains in the ☘ compartment.	<p>The siphon tube is not correctly positioned, or is clogged up.</p> <ul style="list-style-type: none">■ Clean the siphon (see “Cleaning and care - Cleaning the detergent dispenser drawer”).
At the end of the programme there is still liquid in the capsule.	<p>The small pipe in the detergent dispenser drawer onto which the capsule is placed is blocked.</p> <ul style="list-style-type: none">■ Clean the small pipe. <p>This is not a fault. For technical reasons, a small amount of water will remain in the capsule.</p>
There is water next to the capsule in the fabric softener compartment.	<p>CapDosing was not activated or an empty capsule was not removed at the end of the last wash programme.</p> <ul style="list-style-type: none">■ Make sure that you remember to activate CapDosing the next time you insert a capsule.■ Remove and dispose of the empty capsule at the end of each programme. <p>The small pipe in the detergent dispenser drawer onto which the capsule is placed is blocked.</p> <ul style="list-style-type: none">■ Clean the small pipe.
The display is dark.	<p>The display has switched off automatically to save energy (Standby mode).</p> <ul style="list-style-type: none">■ Press any button. Standby comes to an end.

Problem solving guide

An unsatisfactory wash result

Problem	Possible cause and remedy
Liquid detergent does not give the required result.	<p>Liquid detergents usually contain no bleaching agents. They do not remove fruit, coffee and tea stains.</p> <ul style="list-style-type: none">■ Use the Miele 2 Phase System. The targeted addition of UltraPhase 2 during the wash process removes stains effectively.■ Use a general purpose powder detergent containing a bleaching agent.
White residues which look like powder detergent are seen on dark textiles after washing.	<p>The detergent contained compounds (zeolites) to aid water softening which are not soluble in water. These have ended up on the laundry.</p> <ul style="list-style-type: none">■ Try and brush off the residues with a soft brush once the laundry is dry.■ Wash dark textiles using a detergent which does not contain zeolites. Liquid detergents usually do not contain zeolites.■ Use the <i>Dark garments</i> programme.
Grey, greasy particles cling to washed laundry.	<p>Insufficient amounts of detergent were used to break down the particles of grease in heavily soiled laundry.</p> <ul style="list-style-type: none">■ Use more detergent or liquid detergent.■ Before washing the next load, run the <i>Clean machine</i> programme using the Miele IntenseClean washing machine cleaner or a powder detergent.

Problem solving guide


The door will not open

Problem	Possible cause and remedy
The door cannot be pulled open during a programme.	<p>The drum is locked during a programme.</p> <ul style="list-style-type: none">■ Touch the <i>Start/Stop</i> sensor to cancel the programme. <p>The programme is cancelled, the door unlocks and you can pull it open.</p>
	<p>There is still water in the drum and the machine is unable to drain.</p> <ul style="list-style-type: none">■ Clean the drain filter and the drain pump as described in "Opening the door in the event of a blocked drain outlet and/or power cut".
Extra cooling appears in the display after a programme has been cancelled.	<p>For safety reasons, the door cannot be opened if the suds temperature is higher than 55°C.</p> <ul style="list-style-type: none">■ Wait until the temperature in the drum has decreased and the message has gone out in the display.
The following appears in the display:  The door lock is jammed. Call Miele.	<p>The door lock has jammed.</p> <ul style="list-style-type: none">■ Call Miele.

Problem solving guide

Opening the door in the event of a blocked drain outlet and/or power cut

- Switch off the washing machine.

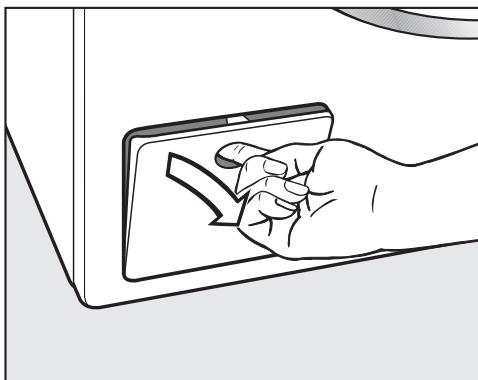

- Open the drain pump access panel.

Blocked drain outlet


If the drain outlet is blocked, a larger quantity of water can remain in the washing machine.

⚠ Risk of scalding due to hot suds.
Escaping suds will be hot if laundry has been washed at high temperatures!
Carefully allow all suds to drain off.

Procedure for draining the machine


When removing the drain filter, do not remove it completely.

- Place a suitable container under the access panel, e.g. a universal oven tray.

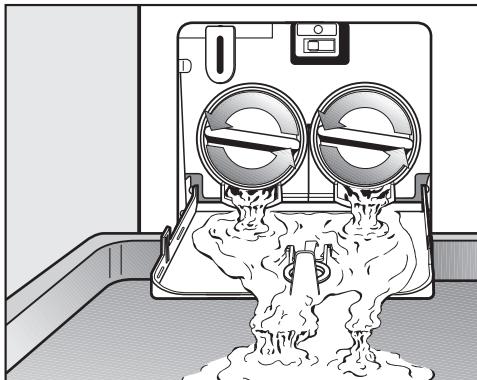


- Slowly unscrew the filters until water runs out. Be careful not to release too much water at once. If the flow of water is too strong, some water can seep into the machine base and activate the water protection float switch. This will prevent the machine from functioning.
- To interrupt the flow of water, tighten the filters again.

Once the flow of water ceases:

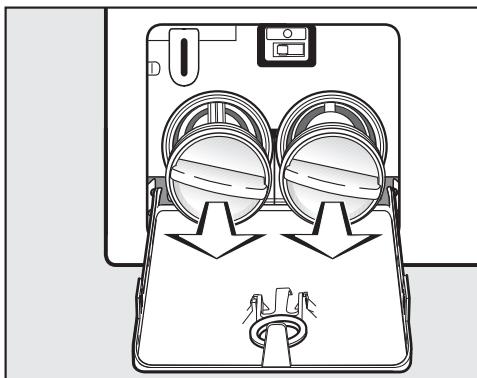


- Remove the filters completely.

Problem solving guide

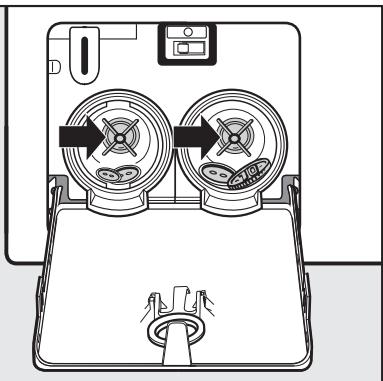

- Clean the filters thoroughly.
- Remove any foreign objects (e.g., buttons, coins etc.) and clean the interior. Turn the impellers by hand to check that they rotate freely.

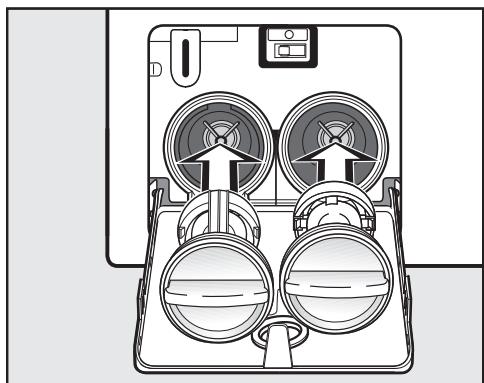

- Replace the filters correctly (on the right and left) and tighten them.
- Close the drain pump access panel.

⚠ Risk of water damage.

Make sure the drain filters are securely tightened. Otherwise there is a risk of water leakage during use. Replace the drain filters correctly and tighten them securely.


Opening the door



Danger of injury due to rotating drum!

Reaching into a moving drum is extremely dangerous. Danger of injury!

Always make sure that the drum is stationary before reaching in to remove laundry.

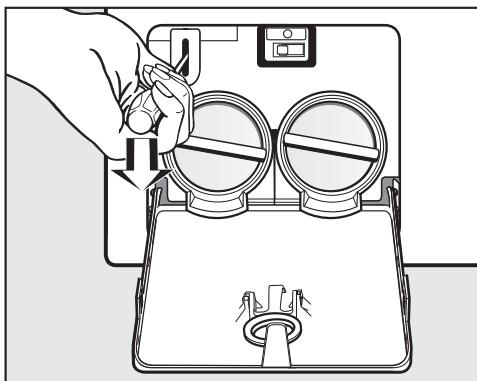

- Use a screwdriver to unlock the door of the machine as shown.
- Pull open the door.

Service


Contact in case of fault

In the event of any faults which you cannot remedy yourself, please contact Miele.

Contact information for Miele can be found at the end of this booklet.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

The data plate is found above the porthole glass when the door is opened.

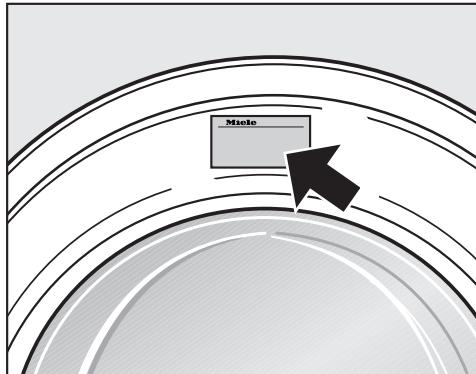

Optional accessories


Optional spare parts and accessories for this washing machine are available from Miele.

Warranty

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.


Front view

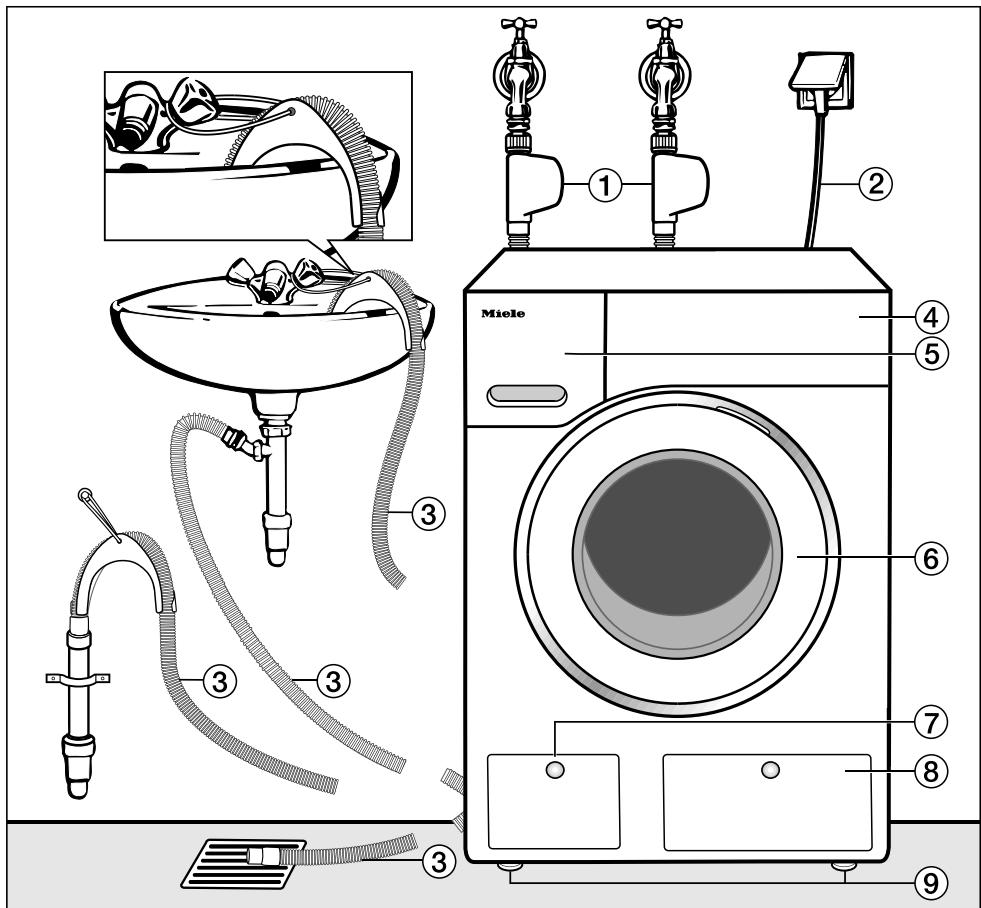

- ① Cold and hot water inlet hoses (pressure-proof to 7000 kPa)
- ② Electrical connection
- ③ Flexible drain hose (with detachable swivel elbow)
- ④ Control panel
- ⑤ Detergent dispenser drawer
- ⑥ Door
- ⑦ Access to filters, pumps and emergency release
- ⑧ Access panel for TwinDos cartridges
- ⑨ Four height-adjustable feet

Installation and connection

Rear view

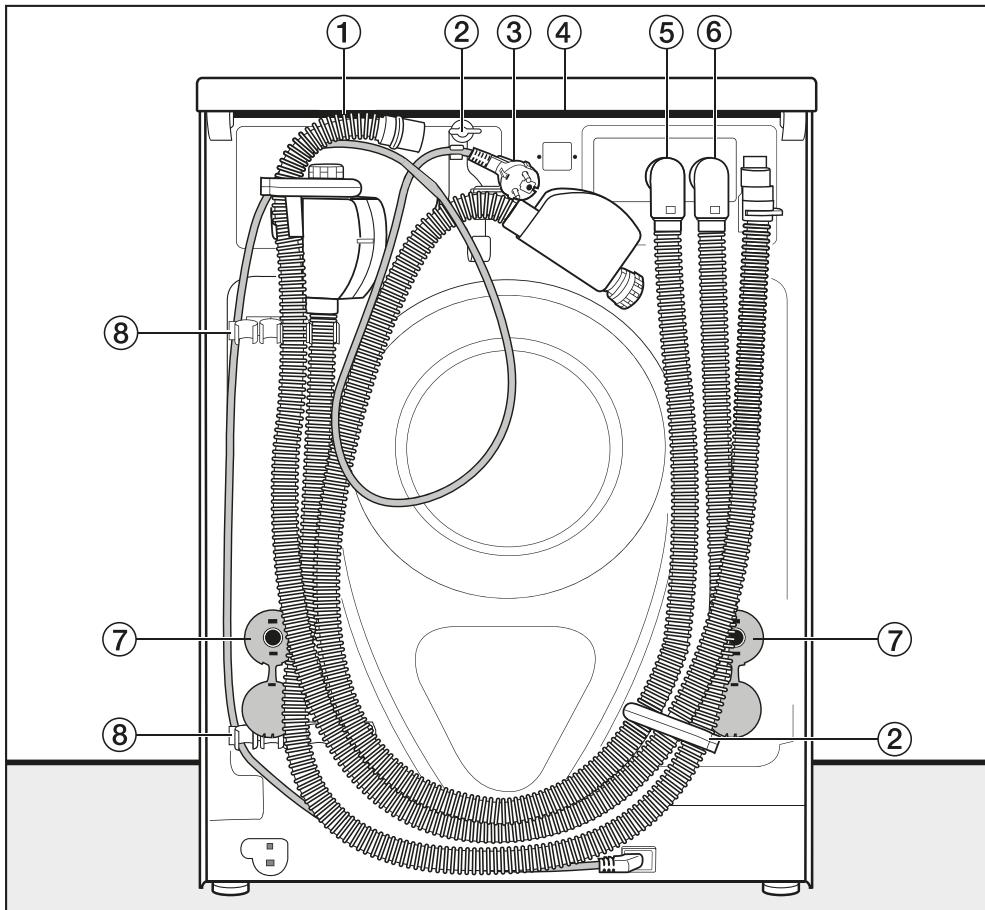

- ① Drain hose
- ② Transport clips for inlet and drain hoses and mains connection cable
- ③ Electrical connection
- ④ Protruding lid for holding when moving the machine
- ⑤ Cold water inlet hose with Waterproof system
- ⑥ Hot water inlet hose with Waterproof system
- ⑦ Safety caps for transit bars
- ⑧ Transport clips for inlet and drain hoses and for storing transit bars when not in use

Installation surface

A concrete floor is the most suitable installation surface. It is far less prone to vibration during the spin cycle than wooden floorboards or a carpeted surface.

Please note:

- The machine must be level and securely positioned.
- To avoid vibrations during spinning, the machine should not be installed on soft floor coverings.

If installing on a wooden joist floor:

- Install the machine on a plywood base (at least 59 x 52 x 3 cm). The base should span several joists and be bolted to the joists and not only to the floorboards. Check for the presence of pipes and cables first.

Useful tip: If possible, install the machine in a corner. This is usually the most stable part of the floor.

Transporting the washing machine to its installation site


 Danger of injury due to unsecured lid.

Make sure the fixings at the back of the lid are secure. They may become brittle due to external circumstances. There is a danger of the lid being pulled off when carrying the appliance.

Before carrying the appliance, check that the lid is secure where it protrudes at the back.


- Carry the washing machine by the front feet and by the lid where it protrudes at the back of the appliance.

Removing the transit bars

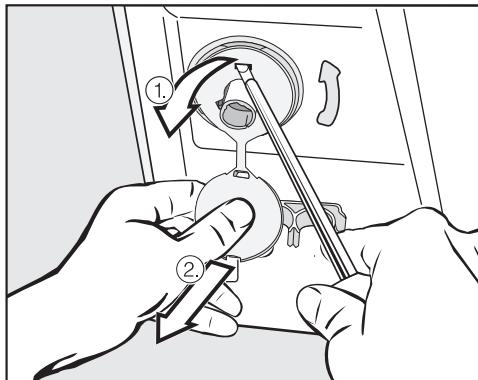


- Remove the left and right covers.
 1. Pull off the transit bar covers and
 2. then use a screwdriver to release the catches at the top and bottom.


Installation and connection

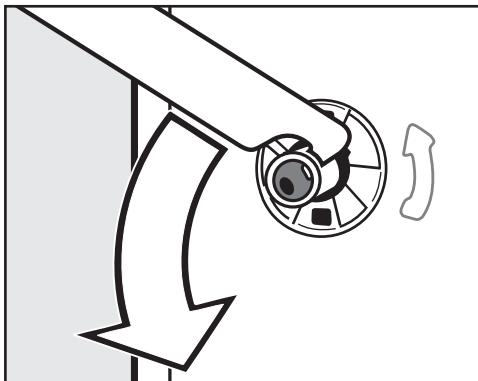


- Using the spanner supplied, turn the left-hand transit bar 90°, then

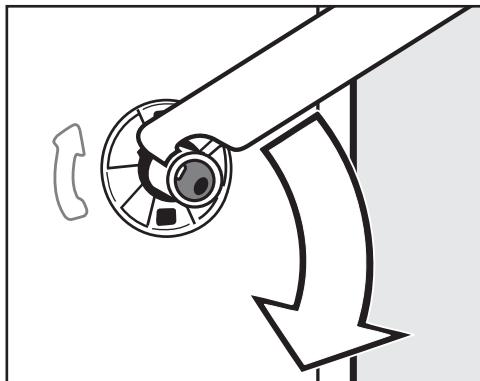

- Turn the right-hand transit bar 90°, then

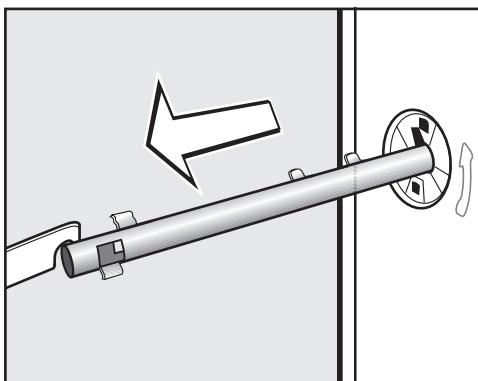


- withdraw the transit bar.

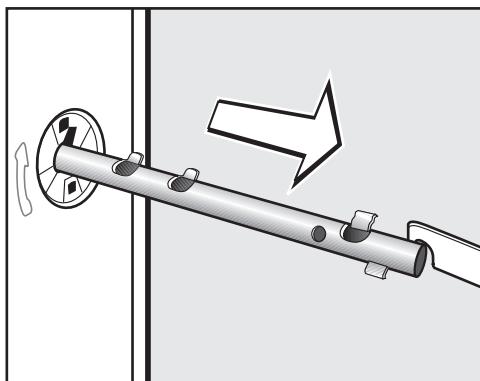


- withdraw the transit bar.

Installation and connection

⚠ Risk of injury from sharp edges.
There is a risk of injury from reaching into holes that are not covered.
To avoid the risk of injury, the holes for the transit bars must be covered after the transit bars have been removed!

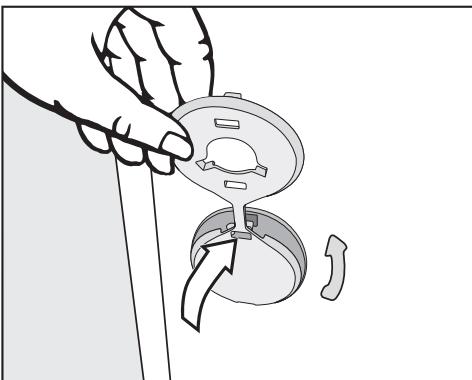

- Fit the stoppers onto the two holes.

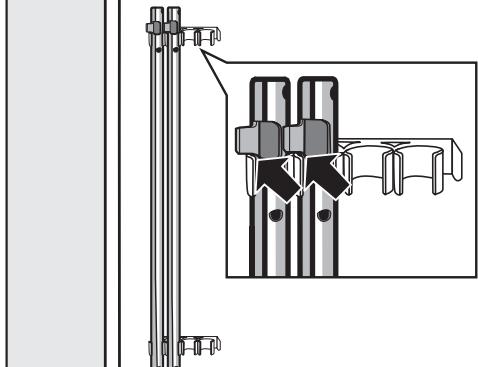

- Secure the transit bars to the back of the washing machine. Make sure that the top catch is located above the holder.

⚠ Risk of damage from incorrect transport.

The washing machine may become damaged if moved without the transit bars in place.

Keep the transit bars in a safe place. Fit them again if the machine is to be moved (e.g. when moving house).

Refitting the transit bars

Refitting is carried out by reversing the procedure.

Installation and connection


Levelling the machine

The washing machine must stand perfectly level on all four feet to ensure safe and proper operation.


Incorrect installation may increase electricity and water consumption and may cause the machine to move about.

Screwing out and adjusting the feet

The four adjustable screw feet are used for levelling the washing machine. All four feet are screwed in when the appliance is delivered.

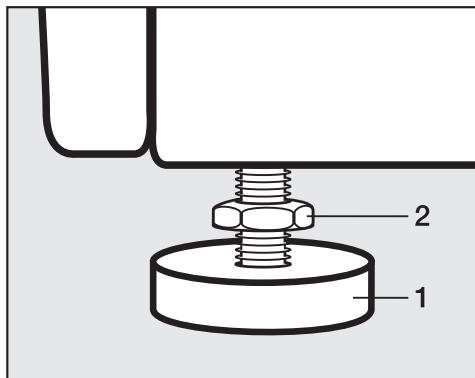

- Using the spanner supplied, turn counter nut **2** in a clockwise direction. Then turn counter nut **2** together with foot **1** to unscrew.

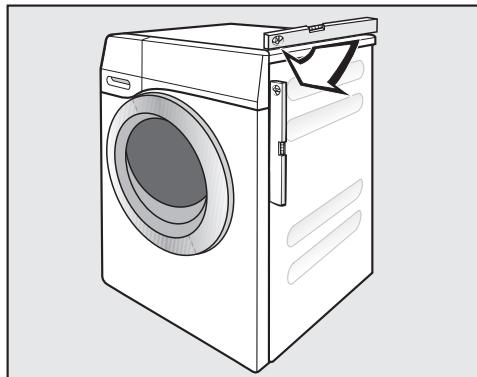

- Use a spirit level to check that the washing machine is standing level.
- Hold foot **1** securely with a pipe wrench. Turn counter nut **2** again using the spanner supplied until it sits firmly up against the housing.

 Risk of damage due to incorrectly aligned washing machine. There is a danger of the washing machine moving about if the feet are not secured.

Turn all four counter nuts for the feet until they sit firmly up against the housing. Please also check this for the feet which did not need adjustment.

Installation and connection

Installing under a continuous worktop

 Risk of electric shock due to exposed cables.

There is a risk of coming into contact with live parts while the lid is removed.

Do not remove the washing machine lid.


This washing machine (with lid intact) can be pushed under a worktop if there is space to do so.

Washer and dryer stack

A Miele tumble dryer can be stacked with the washing machine. The appropriate "WTV" stacking kit* to match your tumble dryer is required.

All parts marked * are available from Miele.

Please note the following:

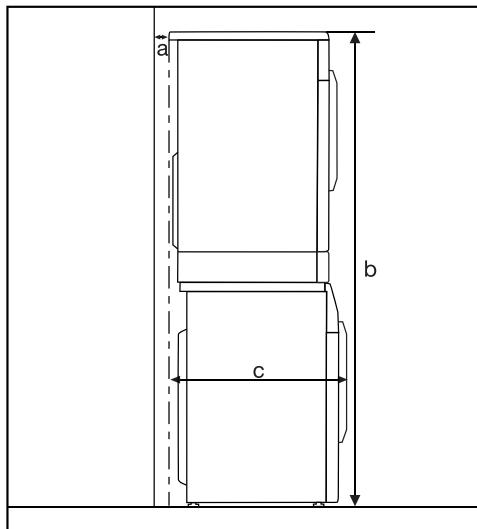

a = at least 2 cm

b = WTV without drawer: 172 cm
WTV with drawer: 181 cm

c = 68 cm

Installation and connection


The Miele water protection system

The Miele water protection system protects all parts of the washing machine and surrounds from water damage.

The system consists of three main components:

- the inlet hose
- the electronic unit and drainage and overflow protection
- the drain hose

The Waterproof system (WPS)

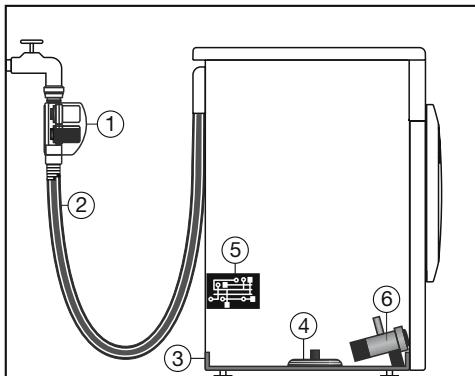

- ① Two solenoid valves
- ② Double-skinned inlet hose
- ③ Sump
- ④ Float switch
- ⑤ Electronic unit
- ⑥ Drain pump

The inlet hoses

- The casing on the inlet hoses contains two solenoid valves ①, which cut off the water intake directly at the tap. These valves provide two-fold protection. In the event that one of the valves is faulty, the other valve will cut off the water intake.

Blocking the water intake at the tap means that the inlet hoses are only under pressure whilst water is being taken into the machine. For the remainder of the time, pressure on the inlet hoses is negligible.

- Protection against the solenoid valves bursting.
The solenoid valves are pressure tested to between 7000 kPa and 10000 kPa against bursting.
- The double-skinned inlet hoses ② have a pressure-resistant inner hose and a protective sleeve. Any leaking water is fed into the sump ③ through this protective sleeve. A float switch ④ closes the solenoid valves, preventing any more water flowing into the machine and water in the suds container is pumped away.

The electronic unit ⑤ and drainage and overflow protection

- Drainage protection

Any leaking water is collected in the sump ③ in the base of the machine. A float switch ④ closes the solenoid valves ①, preventing any more water from flowing into the machine and water in the suds container is pumped away.

- Overflow protection

If the water level exceeds a certain level, the drain pump ⑥ switches in and pumps the excess water away in a controlled manner.

Should the water level rise repeatedly in an uncontrolled way, the drain pump ⑥ will switch on continuously, the washing machine will indicate that there is a fault and a tone will sound.

Drain hose

The drain hose is protected by a ventilation system which prevents the washing machine from being emptied completely.

Connection to the water supply


⚠ Risk of electric shock!

There are electrical wires in the water inlet hose.

The inlet hose must not be connected in an area subject to spray water, e.g. in a bathroom or shower room.



The casing on the water inlet hose must not get wet.

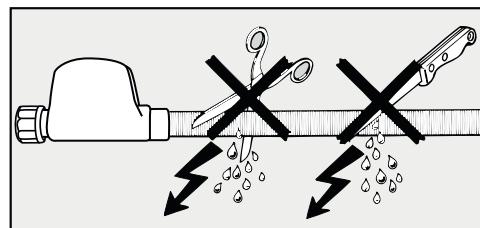

The protective sleeve must not be damaged or kinked.

Installation and connection

The washing machine must be connected to a mains water supply in accordance with current local and national safety regulations.

IMPORTANT Australia and New Zealand

This appliance must be installed according to AS/NZS 3500.1. Backflow prevention is already integrated in the appliance.

The flow pressure must amount to a minimum of 100 kPa (1 bar) and must not exceed an overpressure of 1000 kPa (10 bar). If it is higher than 1000 kPa, a pressure reduction valve must be installed.

Connection to the mains water supply should incorporate a water tap with a $\frac{3}{4}$ " threaded union. If this is not available, only a qualified installer may connect the washing machine to the mains water supply.

The connection point is subject to mains water pressure.

Turn on the tap slowly and check for leaks. Correct the position of the washer and union if necessary.

Maintenance

Only use a **Miele Waterproof system** hose should you need a replacement.

 Damage caused by dirty water.
This washing machine has a filter in the hose connection to the casing to protect the solenoid valve.
This filter must not be removed.

Installation and connection

This washing machine can be operated with cold mains water and/or hot water.


 Damage caused by incorrect water connection.

Connection to hot water only is not permitted. The washing machine requires a cold water connection when operating with hot water in order to control the temperature of the wash water.

Always connect the washing machine to cold mains water.

Programming the washing machine for hot water operation is described in "Settings - Water intake".

Markings on the water inlet hoses

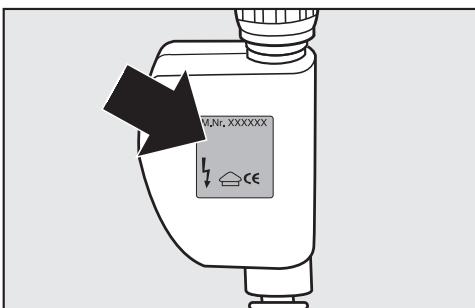

Cold water (cold = Silver label
mains water)

Hot water or = Red label
alternative water
supply

Cold water (default setting)

The washing machine will be operated with cold mains water only.

The other inlet hose is secured to the back of the washing machine.

Hot water

- The preferred temperature is 55°C. The temperature must not exceed 60°C. Consult a qualified plumber if the temperature exceeds 60°C.
- You can heat up your water with cheaper, primary energy sources, e.g. gas, solar power, oil.
- Before connecting to the mains water tap, check that the outflow of cold water does not exceed 5 litres. Each additional litre of cold water reduces the energy efficiency.
- If the hot water tap is turned off for some time, the washing machine will automatically switch to the cold water connection. This safety measure is not intended for the permanent operation of the appliance. The washing machine continues to wash using hot water operation, but washing results are worsened.

Installation and connection

Drainage

The suds are drained through a drain pump with a 1 m delivery head. For the water to drain freely, the hose must be installed free of kinks.

If required, the hose can be extended to a length of up to 5 m. The necessary parts can be purchased from Miele.

For a delivery head of more than 1 m (up to a max. of 1.8 m) a replacement drain pump will need to be fitted.

Please contact Miele for advice.

For a delivery head of 1.8 m the hose can be extended to a length of up to 2.5 m. The necessary parts can be purchased from Miele.

Drain hose connection options

1. Directed into a sink or basin.

Please note:


- Hook the hose over the edge and secure it.
- Make sure that the water can drain away freely without hindrance. Otherwise there is a risk of water overflowing or of some of the drained water being sucked back into the machine.

2. Connected securely to a plastic drain pipe with a rubber nipple (there is no need to use a siphon).

3. Connected securely to a floor drain (gully).

4. Connected securely to a standpipe.

Please note:

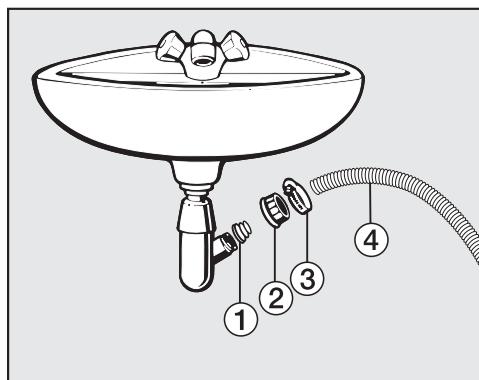

① Adapter

② Nut

③ Hose clip

④ End of the hose

- Fit the adapter ① to the sink drain outlet using the nut ②.
- Attach the end of the hose ④ to the adapter ①.
- Use a screwdriver to tighten the hose clip ③ up close to the nut.

Electrical connection

The washing machine is supplied with a mains cable with moulded plug ready for connection to a switched socket.

 Risk of fire from overheating!

Connecting the washing machine to a multi-socket plug adapter or to an extension lead can overload the cable.

Do not use an extension lead or multi-socket plug adapter.

The socket must be easily accessible after the machine has been installed.

All electrical work must be carried out by a suitably qualified and competent person, in strict accordance with national and local safety regulations.

For extra safety, it is advisable to install a residual current device (RCD) with a trip current of 30 mA. Ensure power is not supplied to the appliance until after the installation has been completed.

Connection should be made via a suitable switched socket.

If the connection cable is damaged, it must only be replaced with a specific connection cable of the same type (available from Miele). For safety reasons, such replacement may only be carried out by a qualified technician or Miele.

The data plate indicates the nominal power consumption and the appropriate fuse rating. Compare the specifications on the data plate with those of the mains electricity supply and make sure that they match.

WARNING: THIS APPLIANCE MUST BE EARTHED

Technical data

Height	850 mm
Width	596 mm
Depth	636 mm
Depth with door open	1.054 mm
Height for building under	850 mm
Width for building under	600 mm
Weight	approx. 100 kg
Capacity	9 kg dry laundry
Voltage	See data plate
Rated load	See data plate
Fuse rating	See data plate
Consumption data	See "Consumption data"
Water flow pressure minimum	100 kPa (1 bar)
Water flow pressure maximum	1000 kPa (10 bar)
Inlet hose length	1.60 m
Drain hose length	1.50 m
Connection cable length	2.00 m
Drain pump head height max.	1.00 m
Drain pump length max.	5.00 m
LEDs	Class 1
Test certificates awarded	See data plate
Frequency band	2.412 GHz – 2.472 GHz
Maximum transmission power	< 100 mW
Power consumption when switched off	0.3 W
Power consumption when not switched off	0.3 W

Consumption data

Consumption data for the nominated energy labelling programme according to AS/NZS 2040.1 & AS/NZS 2040.2

	Load	Consumption data		
		Energy in kWh	Water in litres	Duration Normal Cold Water
Cottons <40°C	9.0 kg	0.58	64	4 h 30 min

Notes for test institutes:

Detergent **must** be dispensed via the detergent dispenser drawer.

With the *PowerWash 2.0* washing technique, during the heating phase, the temperature measured by the sensor in the suds container is higher than the actual temperature of the laundry.

The temperature measured there **does not** reflect the temperature of the laundry.

Consumption data

		Load kg	Energy kWh	Water Litres	Duration h:min	Residual moisture %
Cottons	90 °C	9.0	2.60	65	2:29	50
	60 °C	9.0	1.45	65	2:29	50
	60 °C	4.5	1.10	52	2:19	50
	<60°C	9.0	0.74	54	2:59	44
	<60°C	4.5	0.55	49	2:59	44
	40 °C	9.0	1.03	75	2:39	46
	40 °C	4.5	0.70	52	2:29	46
	<40°C	4.5	0.35	42	2:59	44
	20 °C	9.0	0.40	75	2:39	46
Minimum iron	30 °C	4.0	0.34	52	1:59	30
Delicates	30 °C	3.0	0.20	40	1:09	–
Woollens 	30 °C	2.0	0.23	35	0:39	–
Automatic plus	40 °C	6.0	0.60	59	1:59	–
QuickPowerWash	40 °C	5.0	0.75	45	0:59	–
Express 20 ¹⁾	40 °C	3.5	0.33	30	0:20	–
Shirts ²⁾	60 °C	2.0	0.66	40	1:31	–

1) Quick Extra activated

2) Pre-ironing Extra deactivated

For labelling parameters conforming to AS/NZS 2040.1 & AS/NZS 2040.2, please refer to the previous page of this booklet.

Consumption data can vary from the nominal values given depending on water pressure, water hardness, water inlet temperature, room temperature, type and volume of load, fluctuations in the electricity supply and any Extras selected.

The consumption data shown in the EcoFeedback display can vary from the consumption data quoted here. The variations arise from component tolerances and on-site conditions e.g. fluctuations in the pressure of the water supply, mains voltage and fluctuations in the mains voltage.

You can use the settings to alter the machine's electronics to suit changing requirements.

Settings can be altered at any time.


Calling up settings

- Switch on the washing machine.
- Scroll to the second page in the main menu.
- Touch the Settings sensor.

The display will change to show the Settings menu.

Selecting settings

The settings are grouped into different areas.

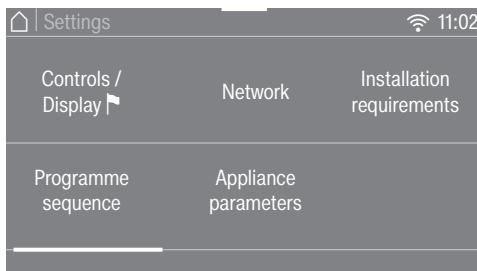

- Select the required area.
- Scroll through the list until the setting you want appears.
- Touch the sensor to select the setting you require.

Changing a setting

- Change the value displayed and confirm with OK.

or

- Touch an option to select it.

An option which is selected will be highlighted orange.

The option is saved. The display will then switch to the Settings menu, or go back to the previous menu level.

Closing the Settings menu

- Touch the \leftarrow sensor.

The display will then go back to the previous menu level.

- Touch the \square sensor.

The display will change to show the main menu.

Settings

Controls / Display

Language

The display can be set to appear in one of several different languages.

The flag  after the word *Language* (Sprache in German) acts as a guide in case a language which is not understood has been set.

The language selected is saved.

Consumption

In this setting you can check the saved energy and water consumption values and enter the energy cost.

Options

- Previous programme
the consumption for the last programme carried out.
- Total consumption
Shows the total of the energy and the total of the water used by the previous programmes.
- Set the cost
You can enter the cost for energy (electricity) and water.

Code

The code prevents the washing machine being used without your knowledge.

Options

- Activate
If you activate the code, you have to enter a code after switching the washing machine on. Otherwise it cannot be operated.
The factory default code is 125.
- Change
If wished, you can set a different three-digit code.
- Deactivate
If you forget the code, only a Miele service technician can unlock the washing machine.
Important! Make a note of your new code.

Memory

The washing machine will save the last settings (temperature, spin speed and some of the Extras) selected for a programme after the programme has started.

When the programme is chosen again, the saved settings will appear in the display.

Memory is deactivated as standard.

Clock display

After selecting the clock format, you can set the time of day.

Clock format

- 24 h clock (default setting)
- 12 h clock

Time

- The time of day can be set.

Volume

Finish tone

The volume can be changed for the buzzer that sounds at the end of the programme.

It can be set to one of seven different settings or switched off altogether.

Keypad tone

The volume of the tone that sounds when a sensor is touched can also be changed.

It can be set to one of seven different settings or switched off altogether.

Display brightness

The brightness of the display can be altered.

It can be set to one of seven different settings.

Temperature unit

The temperature can be displayed as degrees Celsius (°C) or Fahrenheit (°F).

The factory setting is Celsius (°C).

"Display" off status

The display and the sensor control lighting is switched off to save energy. The *Start/Stop* sensor flashes slowly.

Options

- Off
The lighting remains switched on.
- On
The lighting switches off after 10 minutes.
- On, not in current prog. (factory default setting)
The lighting remains switched on throughout the programme. The lighting switches off 10 minutes after the programme has ended.

Settings

Programme sequence

TwinDos

You can set the type of detergent and dispensing quantities and check the level of the UltraPhase 1 and UltraPhase 2 cartridges.

Select detergent

If you wish to use your own detergent with the TwinDos function instead of UltraPhase 1 and 2, you will need to purchase the empty TwinDos containers separately (optional accessories).

UltraPhase 1 and 2 can only be dispensed as a package. If a different agent is selected, the setting for the other compartment is automatically deleted.

The following agents can be used:

- Miele UltraPhase 1
- Miele UltraPhase 2
- Universal detergent
- Colour detergent
- Delicates detergent
- Delicates/ Woollens
- Fabric softener

Follow the manufacturer's instructions on dosage given on the packaging.

The dosage amount required for the agent being used must be set. Follow the instructions in the display on how to do so.

Useful tip: If you select No agent, the respective TwinDos compartment will be deactivated.

Change dosage

The values set for dispensing detergent from compartments ① and ② can be checked and corrected.

Soiling

You can specify the default setting for the degree of soiling.

The following soiling levels are available to choose from:

- Light
- Normal
- Heavy

The factory default setting is: Normal

Water plus level

There are four different water levels which can be selected for the Water plus Extra.

Levels

- Normal (factory default setting)
- Plus δ
- Plus δδ
- Plus δδδ

Maximum rinse level

The water level in the rinse can be permanently set to the highest value.

This function is important for allergy sufferers as it achieves excellent rinse results. The water consumption will be increased.

The maximum rinse level is deactivated as standard.

Soak duration

You can set a duration for the soak process of between 30 minutes and 6 hours.

A duration can be selected in 30-minute increments. When the *Soak Extra* is selected, the laundry will be soaked for the duration selected.

A duration of 0:30 h is set as standard.

Longer pre-wash Cottons

If you require a longer pre-wash, you can extend the standard pre-wash time of 25 minutes in the *Cottons* programme.

- Normal (factory default setting)
25-minute pre-wash.
- + 6 min
31-minute pre-wash.
- + 9 min
34-minute pre-wash.
- + 12 min
37-minute pre-wash.

Gentle action

With gentle action activated, drum agitation is reduced. In this way, lightly soiled items can be washed more gently.

Gentle action can be activated for the *Cottons* and the *Minimum iron* programmes.

Gentle action is deactivated as standard.

Anti-crease

The Anti-crease function helps prevent creasing if laundry is not going to be removed immediately after the end of the programme.

At the end of the programme, the drum continues to turn at intervals for up to 30 min. The washing machine door can be unlocked at any time by touching the *Start/Stop* sensor and then opened.

Anti-crease is deactivated as standard.

Settings

Network

Miele@home

Control the networking of your washing machine with your Wi-Fi network.

The following points may appear in the submenu:

Set up

This message only appears if the washing machine has not yet been connected to a Wi-Fi network.

Please refer to “Before using for the first time” for instructions on how to set up the connection.

Activate

(visible if Miele@home is deactivated)

The Wi-Fi function is reactivated.

Deactivate

(visible if Miele@home is activated)

Miele@home remains set up, the Wi-Fi function is switched off.

Connection status

(visible if Miele@home is activated)

The following values are displayed:

- the quality of Wi-Fi reception
- the network name
- the IP address

Set up again

(visible if set up)

Resets the Wi-Fi login (network) to immediately re-establish a new connection.

Reset

(visible if set up)

- The Wi-Fi is switched off.
- The Wi-Fi connection will be reset to the factory setting.

Miele@home is no longer set up. A new connection set-up has to be carried out in order to use the Miele@home setting again.

SmartGrid

The SmartGrid setting (available depending on country) is only visible if the Miele@home setting is set up and activated.

This function can be used for starting your washing machine automatically at a time when your energy supplier's energy costs are most economical.

Activating SmartGrid gives the *Timer* sensor a new function. Use the "Timer" sensor to set *SmartStart*. The washing machine will then start within the timeframe specified by you when it receives a signal from your energy supplier.

If it has not received a signal from the energy supplier by the latest start time set, the washing machine will start automatically (see "Delay start").

SmartGrid is deactivated as standard.

Remote control

The Remote control setting (available depending on country) is only visible if the Miele@home setting is set up and activated.

Once the Miele@mobile App has been installed on your mobile device, you can check the status of your washing machine from anywhere and start it remotely. You can also control it remotely via the *MobileControl* function.

You can switch off the Remote control setting if you do not want to operate the washing machine with your mobile device.

If Remote control is not switched on, the App can cause the programme to be cancelled.

Use the "Delay start" sensor to set a timeframe within which you want to start the washing machine (see "Delay start/SmartStart").

The washing machine will then start within the timeframe specified when it receives your signal.

If it has not received a start signal by the latest start time set, the washing machine will start automatically.

Remote control is activated as standard.

Settings

RemoteUpdate

The RemoteUpdate function is used for updating the software in your washing machine.

The RemoteUpdate function is deactivated as standard.

If you do not install a RemoteUpdate, you can continue to use your washing machine in the usual way. However, Miele recommends installing RemoteUpdates.

Activation

The RemoteUpdate menu option is only displayed and can only be selected if you have added your washing machine to your Wi-Fi network (see “Settings - Network - Miele@home” chapter).

Miele’s RemoteUpdate function can only be used if the washing machine is connected to a Wi-Fi network and you have an account in the Miele@mobile App. The washing machine must be registered with your account in the App.

See the Miele@mobile App for terms and conditions of use.

Some software updates can only be carried out by Miele Service.

Running a RemoteUpdate

If a RemoteUpdate is available for your washing machine, it will be displayed automatically for you.

You can choose to start the RemoteUpdate immediately or wait until later. If you select “Start later”, the prompt to run the RemoteUpdate will be displayed again the next time you switch on your washing machine.

The RemoteUpdate can take a few minutes.

Please note the following information about the RemoteUpdate function:

- You will only receive a message when a RemoteUpdate is available.
- Once a RemoteUpdate has been installed, it cannot be undone.
- Do not switch off the washing machine during a RemoteUpdate. Otherwise, the RemoteUpdate will be aborted and will not be installed.

Appliance parameters

Water intake

You can programme the washing machine to hot water operation.

Options

- Cold water (factory default setting)
The washing machine will be operated with cold water only.
- Hot water main wash
Hot water is used in the main wash.

Legal information

Open source licences

You can view information here.

Settings

Installation requirements

Low water pressure

If the water pressure is below 100 kPa (1 bar), the programme will be cancelled and a fault message will appear.

If the on-site water pressure cannot be increased, activating this function will prevent the programme from being cancelled.

Low water pressure is deactivated as standard.

Suds cooling

When this is activated, additional water flows into the drum at the end of the main wash to cool the suds down. Hot suds can damage plastic drainage pipes.

Suds cooling takes place when a Cottons programme with a temperature of 70°C or higher is selected.

Suds cooling should be activated:

- to prevent the danger of scalding if the drain hose is hooked over the edge of a sink or basin.

Suds cooling is deactivated as standard.

Temperature reduction

At high altitudes water has a lower boiling point. Miele recommends activating the Temperature reduction setting at altitudes of 2000 m or above to prevent water from boiling. The maximum temperature is reduced to 80°C even if a higher temperature is selected.

The Temperature reduction setting is deactivated as standard.

Detergent, fabric care, additives and machine care products are available for this machine. All the products have been designed for Miele appliances.

These and many other useful products can be ordered via the internet at shop.miele.com (depending on country) or from Miele (see end of this booklet for contact details).

Detergent

UltraPhase 1

- Universal liquid detergent
- For white and coloured laundry
- No need to refill, as it is supplied in single use cartridges for the TwinDos system
- Only for use in conjunction with UltraPhase 2

UltraPhase 2

- Universal detergent enhancer
- For white and coloured laundry
- No need to refill, as it is supplied in single use cartridges for the TwinDos system
- Only for use in conjunction with UltraPhase 1

UltraWhite

- Powder detergent
- Suitable for white and light coloured laundry as well as heavily soiled cotton items
- Effective stain removal even at low temperatures

UltraColor

- Liquid detergent for coloured items
- Suitable for coloured and dark/black items
- Protects bright colours from fading
- Effective stain removal even at low temperatures
- Also available as a powder detergent.

Sensitive Skin Powder

- Powder detergent with a mild fragrance for use with white or light coloured garments
- Specially formulated for people with sensitive skin
- Excellent stain removal even at low temperatures
- Environmentally friendly (no phosphates) and no dyes or preservatives
- Not suitable for silks or woollens

Optional accessories

Specialist detergents

Specialist detergents are available as capsules ☈ in convenient single dose amounts or in a handy bottle.

Sportswear

- Liquid detergent for sportswear and fleece garments
- Neutralises unpleasant odours
- Retains the shape of the textiles

Down Items

- Liquid detergent suitable for pillows, sleeping bags and down filled items
- Retains the elasticity of down and feather filled items
- Retains the breathability of down filled items
- Prevents down filling clumping together

WoolCare

- Liquid detergent for woollens and delicates
- Includes a special wheat protein conditioning formula
- Helps prevent pilling and felting
- Gentle on colours

Fabric care

Fabric care is available as capsules ☈ in convenient single dose amounts or in a handy bottle.

Fabric softener

- Fresh, natural fragrance
- Makes laundry soft to handle
- Available as capsules in convenient single dose amounts and as liquid detergent.

Additives

Booster

- For removing stains
- Suitable for white and coloured laundry
- Available as capsules  in convenient single dose amounts

Machine care products

IntenseClean

- For cleaning the washing machine thoroughly and effectively
- Removes grease, bacteria and unpleasant odours
- Use 1–3 times per year

Descaler

- Removes heavy limescale deposits
- Mild and gentle with natural citric acid

Miele Australia Pty. Ltd.

ACN 005 635 398

ABN 96 005 635 398

Miele Experience Centre and

Head Office Melbourne:

1 Gilbert Park Drive

Knoxfield, VIC 3180

Miele Experience Centre South Melbourne:

206-210 Coventry Street

South Melbourne, VIC 3205

Miele Experience Centre and Office Sydney:

3 Skyline Place

Frenchs Forest, NSW 2086

Miele Experience Centre and Office Brisbane:

Tenancy 4C, 63 Skyring Terrace

Newstead, QLD 4006

Miele Experience Centre Gold Coast:

131 Ferry Road

Southport, QLD 4215

Miele Experience Centre and Office Adelaide:

83-85 Sir Donald Bradman Drive

Hilton, SA 5033

Miele Experience Centre and Office Perth:

205-207 Stirling Highway

Claremont, WA 6010

**Miele New Zealand Limited**

IRD 98 463 631

Head Office:

Level 2, 10 College Hill

Freemans Bay, Auckland 1011

Miele Experience Centre

Auckland:

8 College Hill

Freemans Bay, Auckland 1011

Telephone:

0800 464 353 (0800 4 MIELE)

www.miele.co.nz**Miele Global Headquarters****Germany****Miele & Cie. KG**

Carl-Miele-Straße 29

33332 Gütersloh

Federal Republic of Germany

**1300 4 MIELE** (1300 464 353)www.miele.com.au

Miele

WCR 870 WPS

en, AU, NZ

M.-Nr. 11 016 590 / 00